




Assembly Instructions

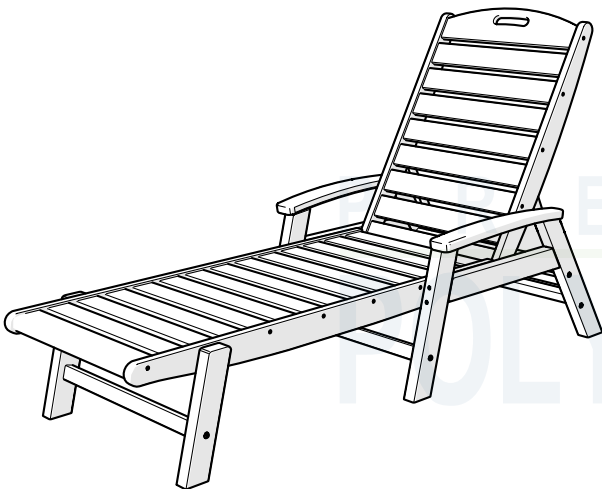

TXC2280
Yacht Club Chaise
with Arms

20-Year Warranty



Cleaning Tips

Keep your Trex Outdoor Furniture™ looking brand new:


For a quick clean:
Simply wipe down with soap and water.

For a deeper clean:
You'll need:
» 1/3 bleach and 2/3 water solution
» clean cloth
» soft bristle brush
Wipe on solution with your cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.


TOOLS

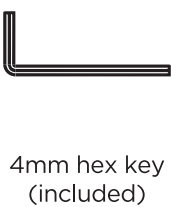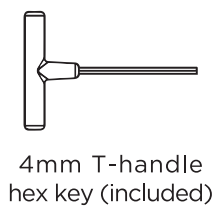

PARTS

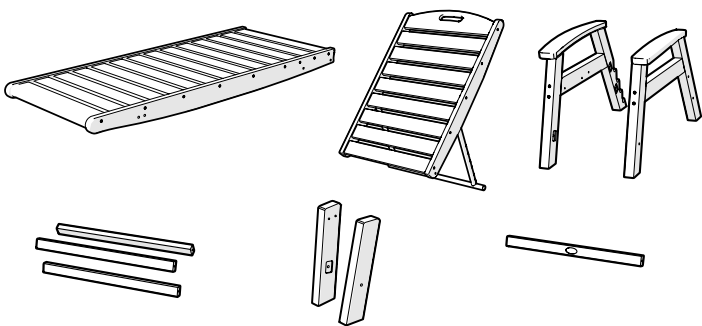


A x12

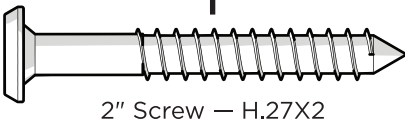

2" Screw — H.27X2

 
B x8




2.5" Screw — H.27X2.5

1

Incorrect

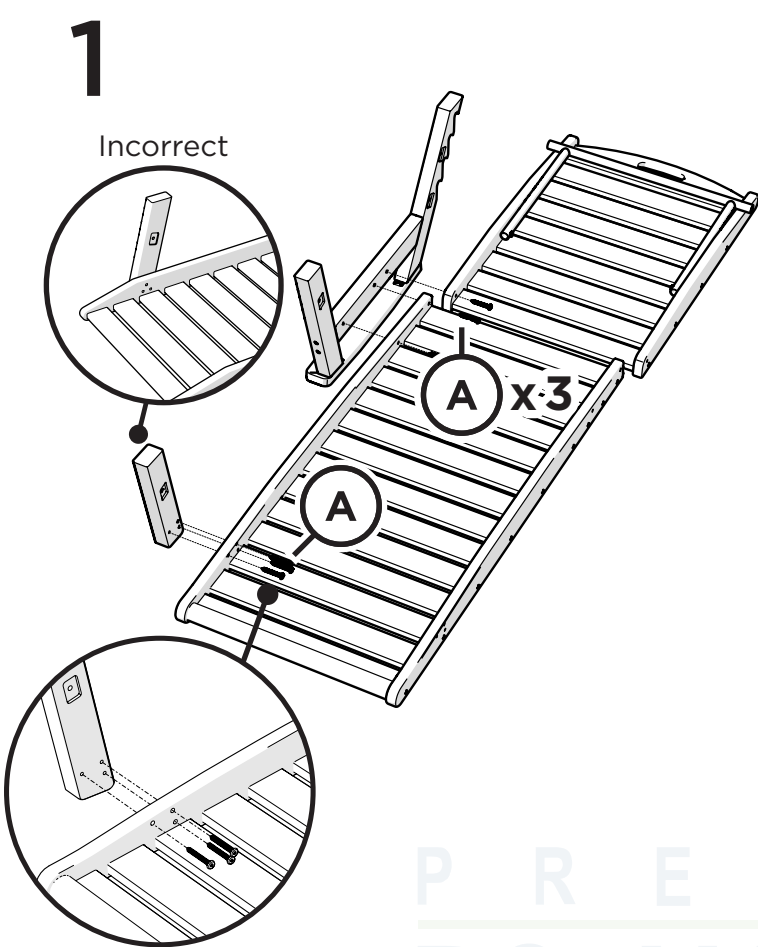

2

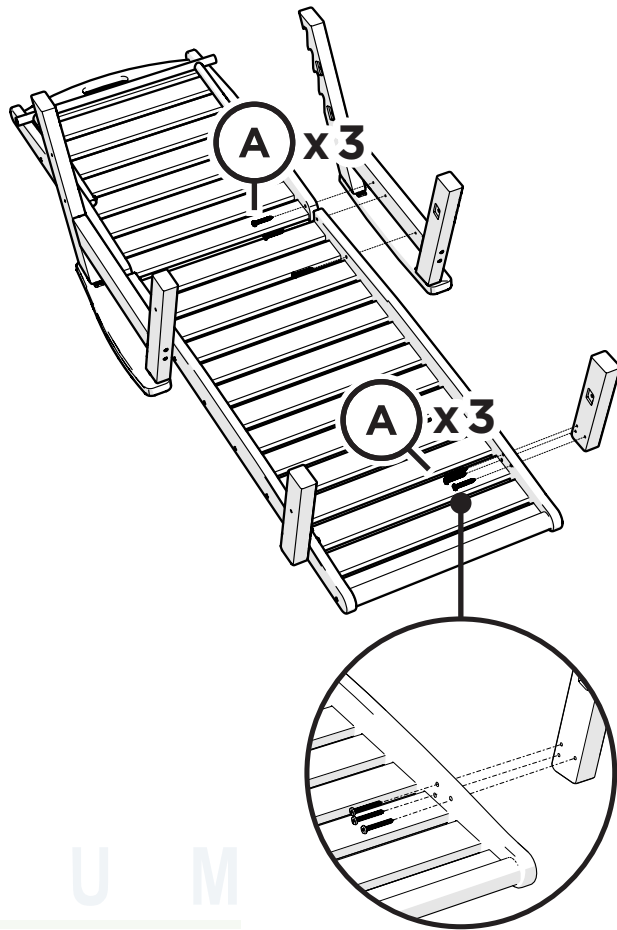

3

