



All Weather Furnishings

Model:
RT448

- (1) Table top
- (2) Leg Assemblies
- (2) Brace
- (1) Hardware pack


TOOLS NEEDED



- 3/8" Wrench
(not included)


Step 1

Attach leg assemblies to table top using (8) 2-1/2" chair bolts.

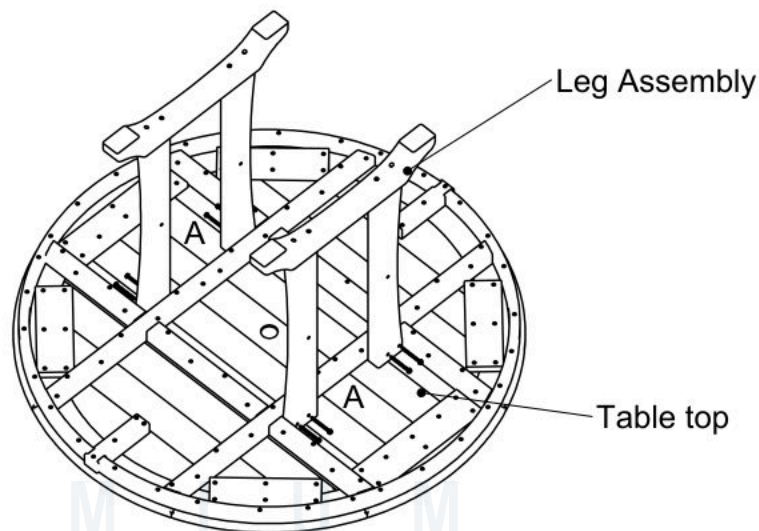


Step 2

Attach braces to leg assemblies using (4) 2-1/2" screws.

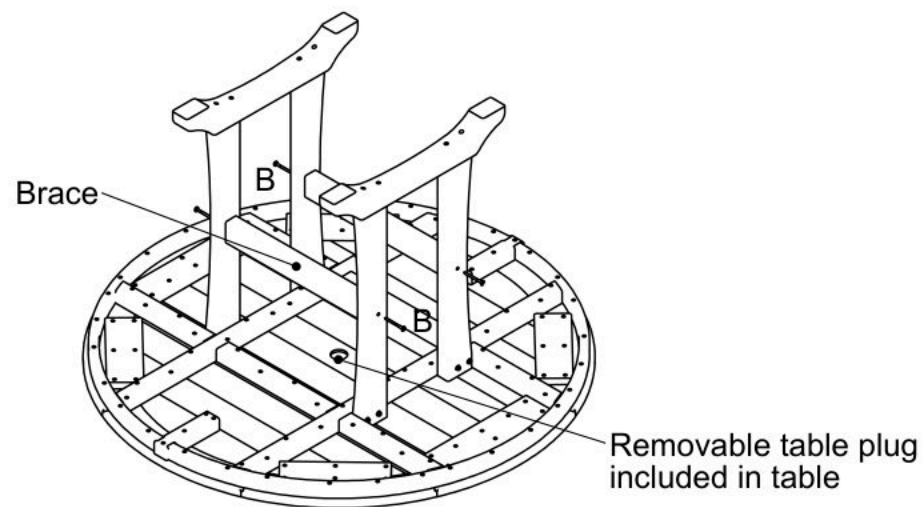

Qty.	Description
8	A - 14 X 2.50 HEX WASHER T-A ALCHM
4	B - .273 X 2.50 SOCKET WAFER A



P R E M I U M

POLY PATIOS

[View this product online at Premium Poly Patios](#)



20-year warranty

Great news! Your POLYWOOD warranty is already activated, no need to send anything in. Located on the bottom of each item is a sticker with a serial number. Please keep this number for your records.

View our full warranty:



If you have questions or concerns regarding assembly instructions or missing parts, please contact us at



Cleaning tips

For a Quick Clean:

Simply wipe down with soap and water.

For a Deep Clean:


Wipe on $\frac{1}{3}$ bleach and $\frac{2}{3}$ water solution with a clean cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.

For a High-Power Clean:


Use a pressure power washer (not exceeding 1,500 psi) to spray off dirt and debris. Apply a $\frac{1}{3}$ bleach and $\frac{2}{3}$ water solution and scrub with a soft bristle brush. Hose down to rinse.

POLYWOOD


Assembly Instructions

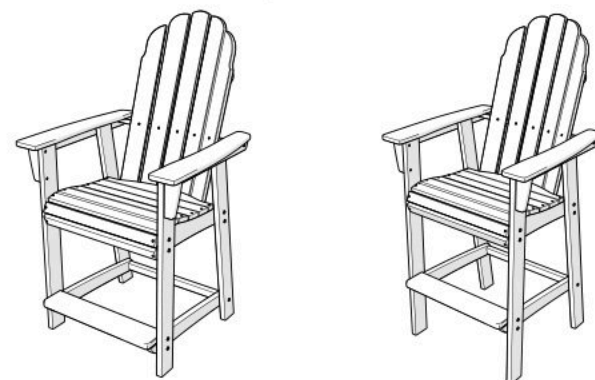

ADD601 / ADD602
Vineyard Curveback Adirondack
Counter / Bar Chair

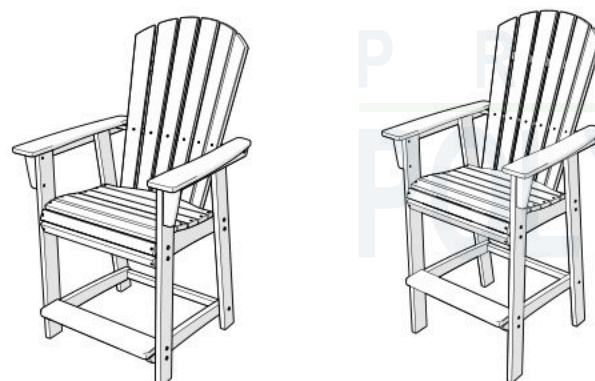


ADD611 / ADD612
Nautical Curveback Adirondack
Counter / Bar Chair

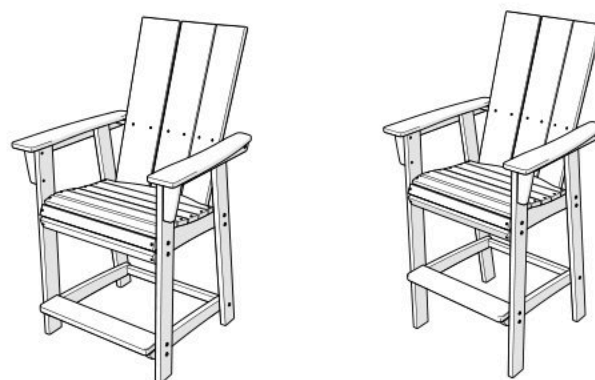

ADD621 / ADD622
Modern Curveback Adirondack
Counter / Bar Chair

TOOLS

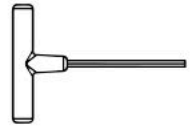


4mm T-handle
hex key (included)

PARTS




A x 12

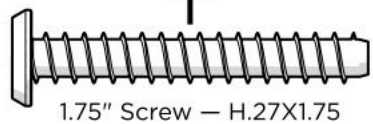


1.75" Screw — H.27X1.75

B x 2




2" Screw — H.27X2

C x 6




3" Screw — H.27X3

1

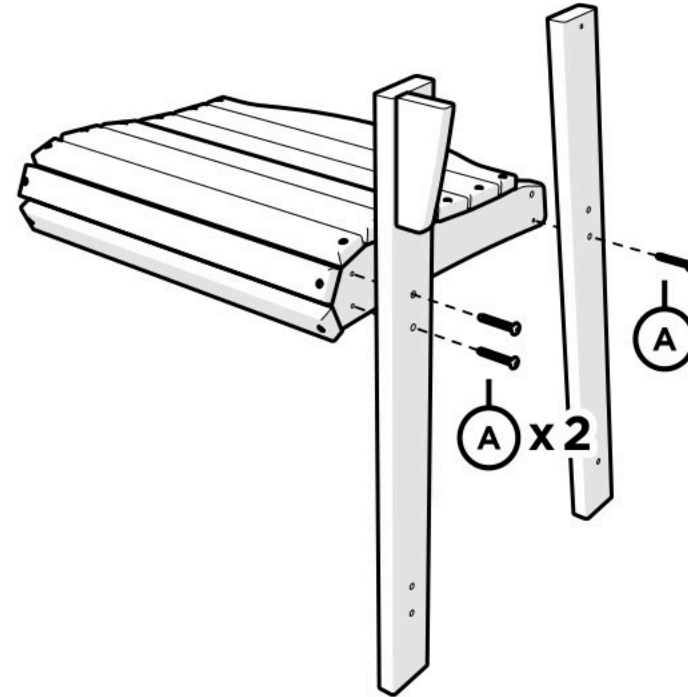


Repeat other side

2

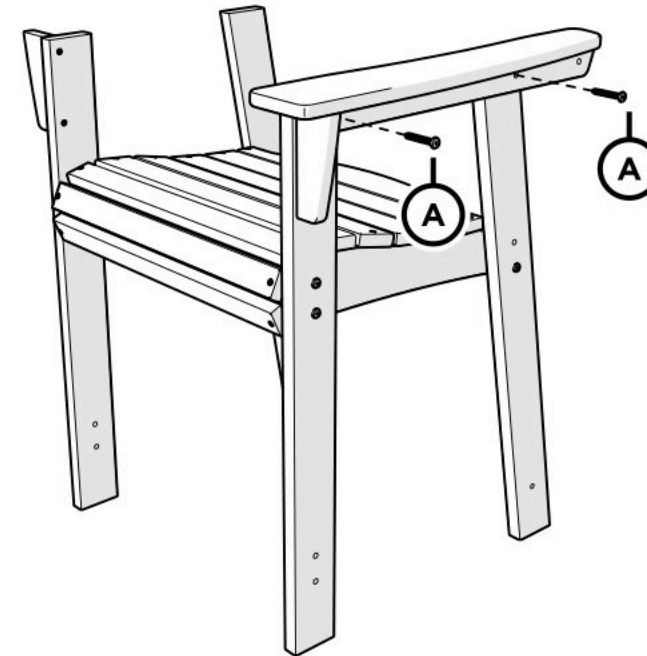


Repeat other side

3

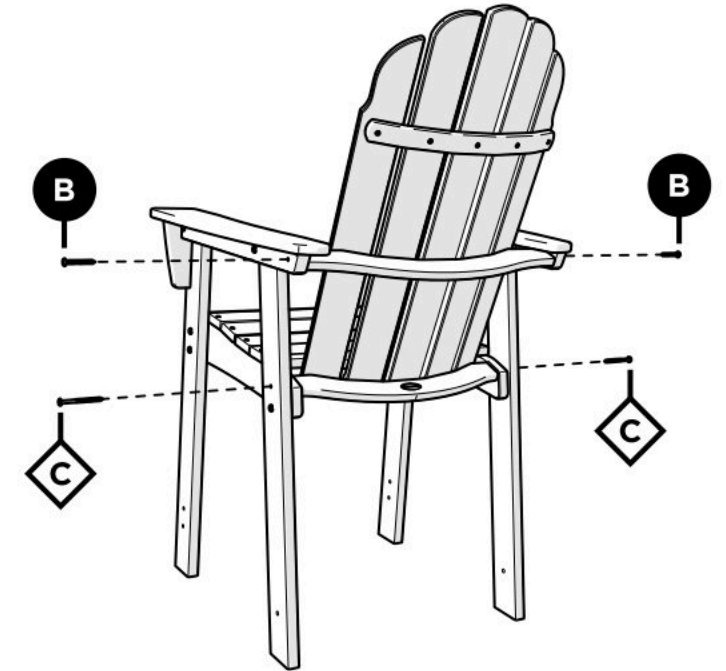

4

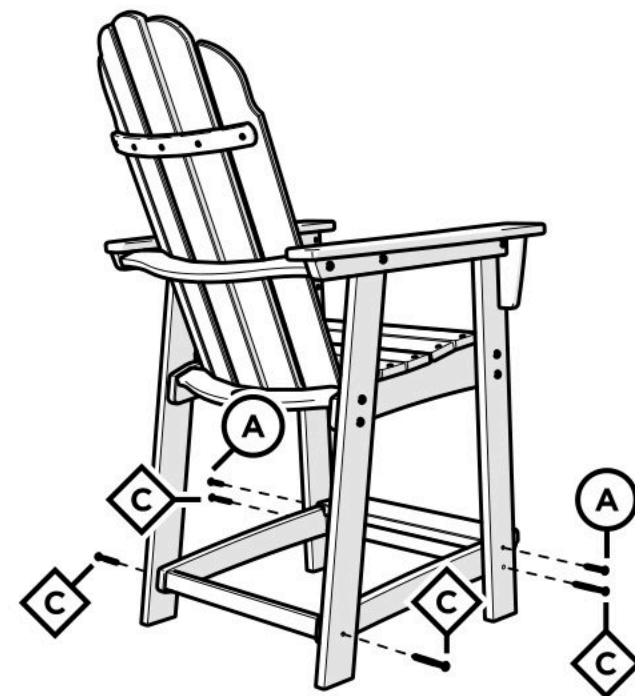

POLYWOOD