

# POLYWOOD

## Assembly Instructions



20-year warranty

View our full warranty:



If you have questions or concerns regarding assembly instructions or missing parts, please contact us at



### Cleaning tips

**For a Quick Clean:**


Simply wipe down with soap and water.

**For a Deep Clean:**

Wipe on  $\frac{1}{3}$  bleach and  $\frac{2}{3}$  water solution with a clean cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.

**For a High-Power Clean:**

Use a pressure power washer (not exceeding 1,500 psi) to spray off dirt and debris. Apply a  $\frac{1}{3}$  bleach and  $\frac{2}{3}$  water solution and scrub with a soft-bristle brush. Hose down to rinse.

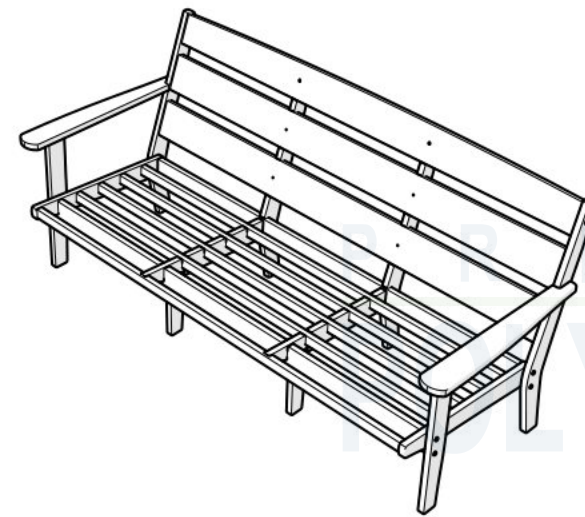


## 4413X Lakeside Deep Seating Sofa

## TOOLS




4mm hex key  
(included)

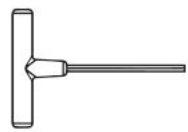


4mm T-handle  
hex key (included)


## PARTS

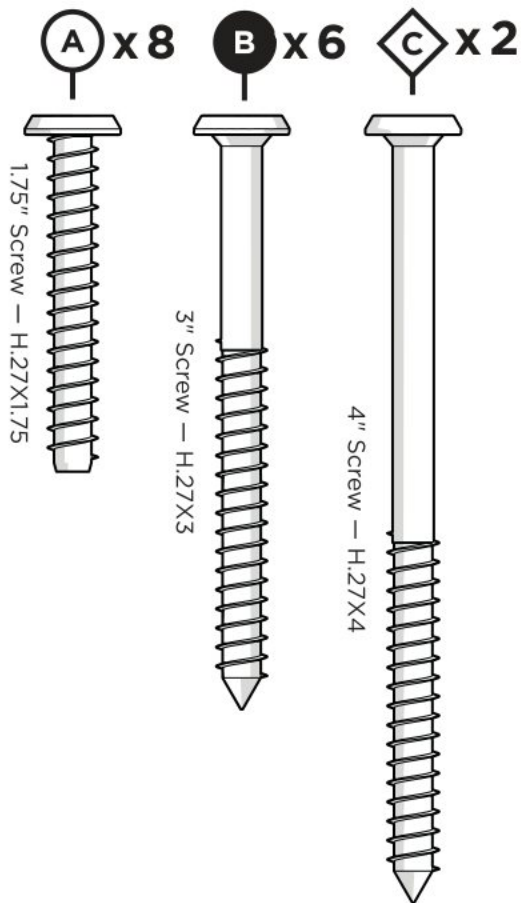


1

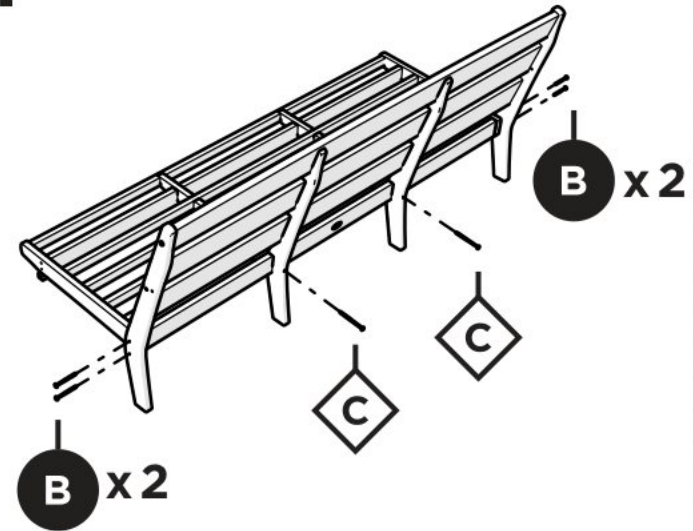



2

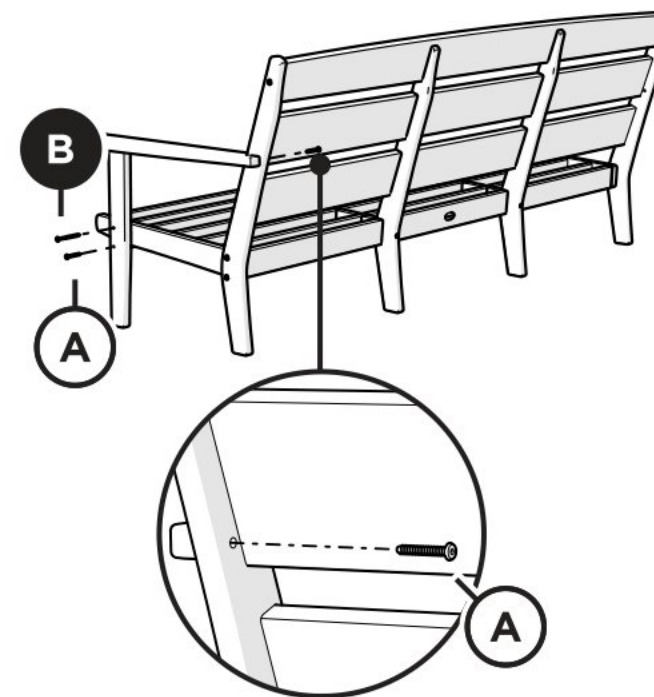

3

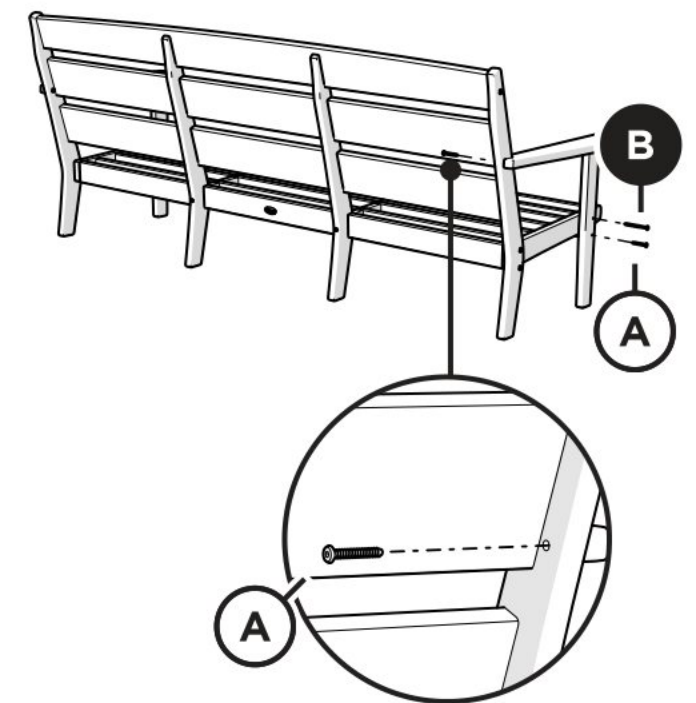

4

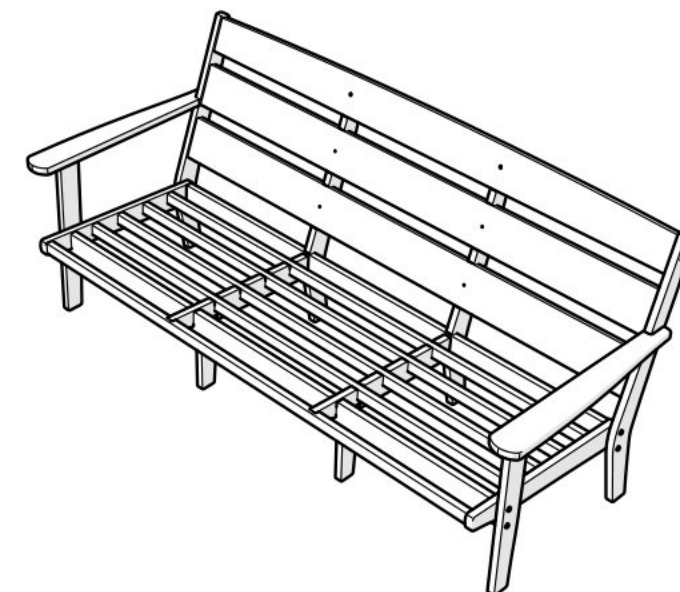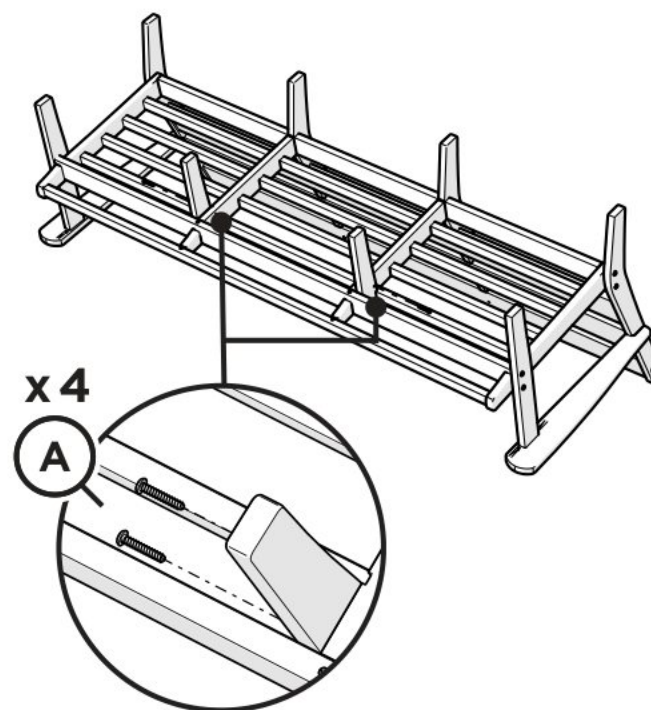

POLYWOOD



## 20-year warranty

View our full warranty:



If you have questions or concerns regarding assembly instructions or missing parts, please contact us at



## Cleaning tips

### For a Quick Clean:

Simply wipe down with soap and water.

### For a Deep Clean:


Wipe on  $\frac{1}{3}$  bleach and  $\frac{2}{3}$  water solution with a clean cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.

### For a High-Power Clean:

Use a pressure power washer (not exceeding 1,500 psi) to spray off dirt and debris. Apply a  $\frac{1}{3}$  bleach and  $\frac{2}{3}$  water solution and scrub with a soft-bristle brush. Hose down to rinse.

# POLYWOOD

## Assembly Instructions

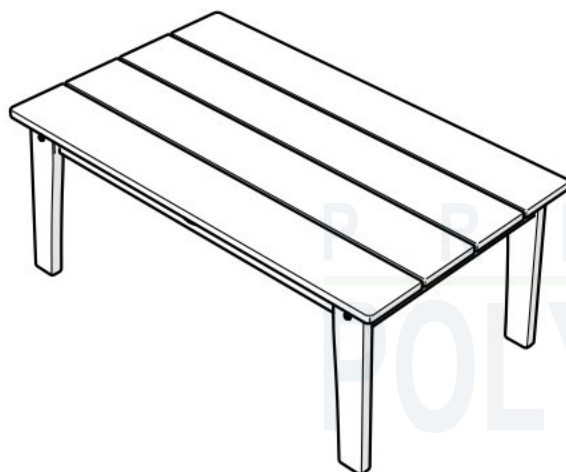


## CTL2336

Lakeside Coffee Table


Grant Park Coffee Table

TOOLS

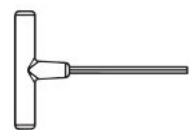


4mm T-handle  
hex key (included)

PARTS

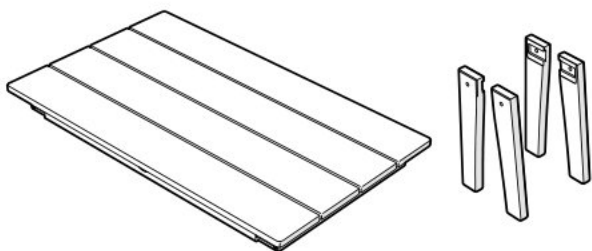


A x 4





1.3" Screw — H.345X1.312

1

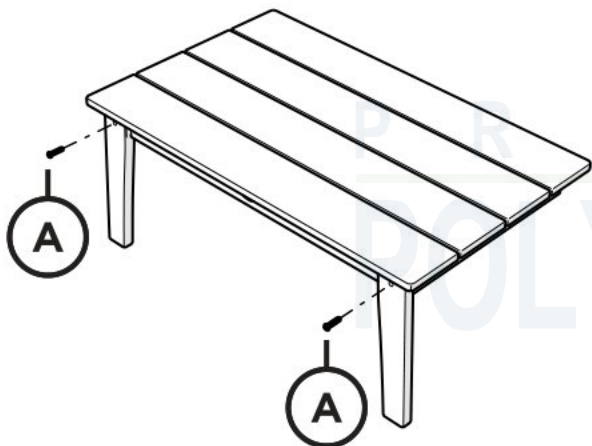

2

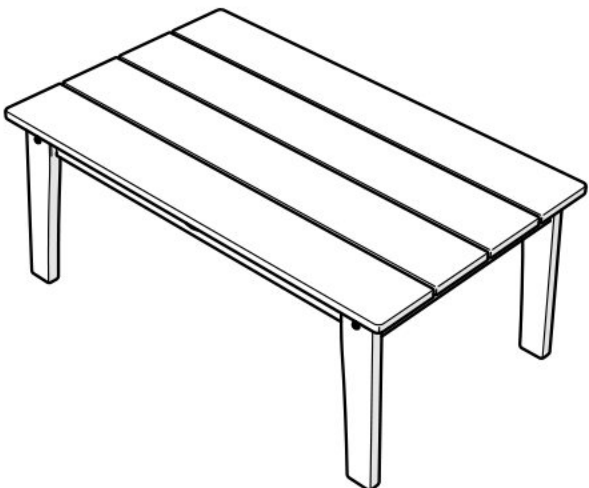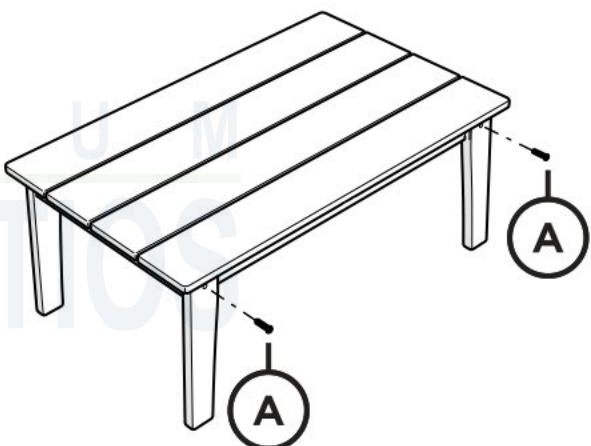

POLYWOOD

# POLYWOOD

## Assembly Instructions



### 20-year warranty

View our full warranty:



If you have questions or concerns regarding assembly instructions or missing parts, please contact us at



### Cleaning tips

#### For a Quick Clean:


Simply wipe down with soap and water.

#### For a Deep Clean:

Wipe on  $\frac{1}{3}$  bleach and  $\frac{2}{3}$  water solution with a clean cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.

#### For a High-Power Clean:

Use a pressure power washer (not exceeding 1,500 psi) to spray off dirt and debris. Apply a  $\frac{1}{3}$  bleach and  $\frac{2}{3}$  water solution and scrub with a soft-bristle brush. Hose down to rinse.

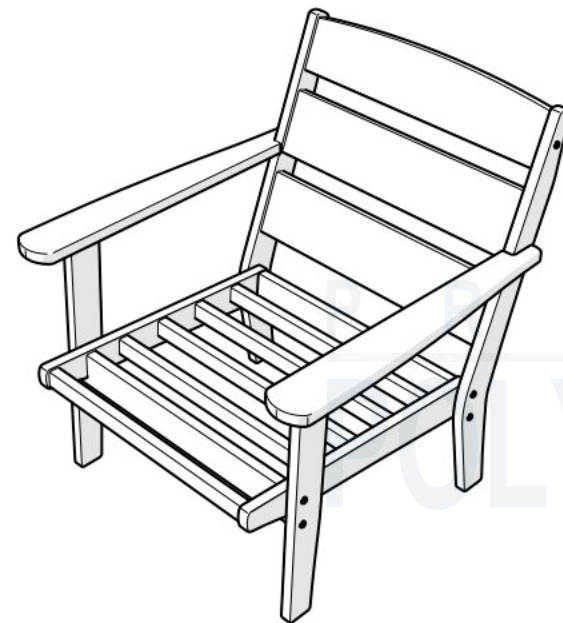


## 4411X Lakeside Deep Seating Chair

TOOLS



4mm hex key  
(included)

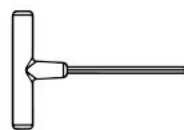


4mm T-handle  
hex key (included)

PARTS



**A** x 4




1.75" Screw — H.27X1.75

**B** x 6




3" Screw — H.27X3


1

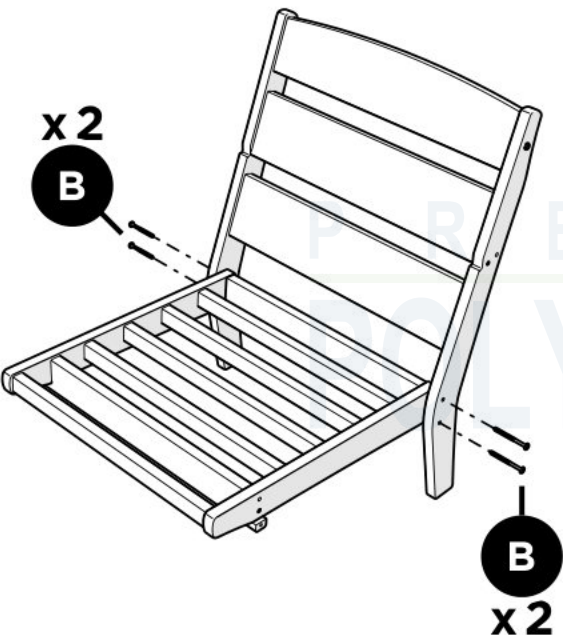

2

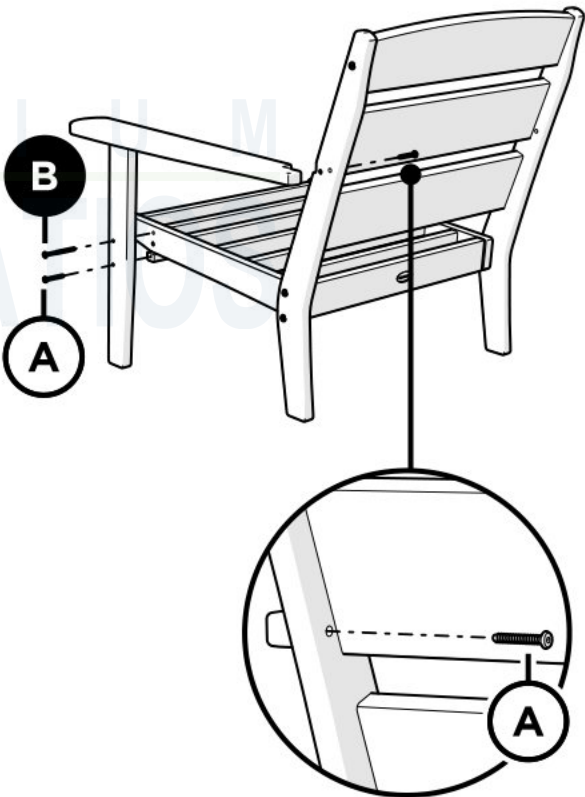

3

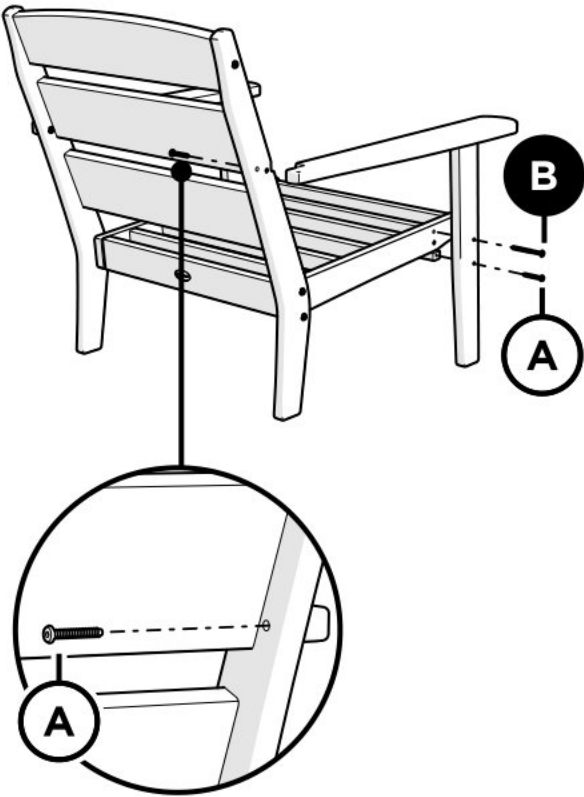

# POLYWOOD

## Assembly Instructions



### 20-year warranty

View our full warranty:



If you have questions or concerns regarding assembly instructions or missing parts, please contact us at



### Cleaning tips

#### For a Quick Clean:


Simply wipe down with soap and water.

#### For a Deep Clean:

Wipe on  $\frac{1}{3}$  bleach and  $\frac{2}{3}$  water solution with a clean cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.


#### For a High-Power Clean:

Use a pressure power washer (not exceeding 1,500 psi) to spray off dirt and debris. Apply a  $\frac{1}{3}$  bleach and  $\frac{2}{3}$  water solution and scrub with a soft-bristle brush. Hose down to rinse.

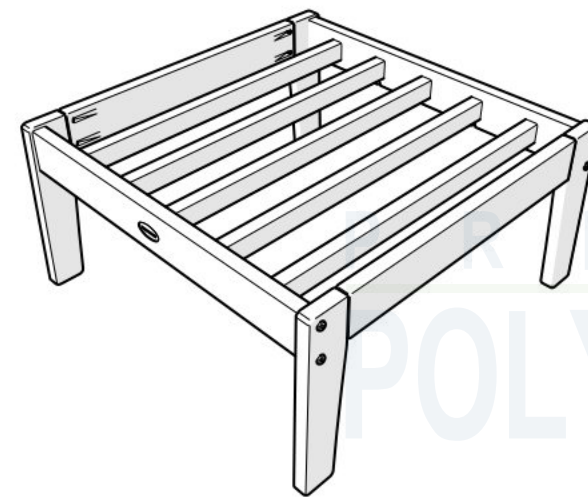



## 4410X Lakeside Deep Seating Ottoman Frame

TOOLS

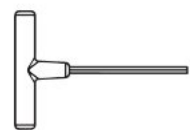


4mm T-handle  
hex key (included)



PARTS

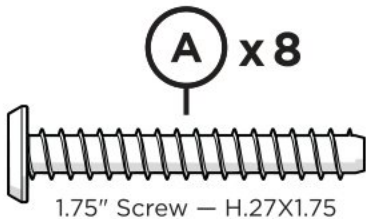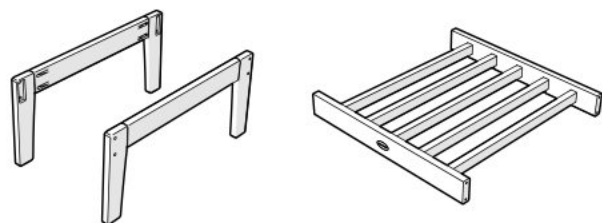

1

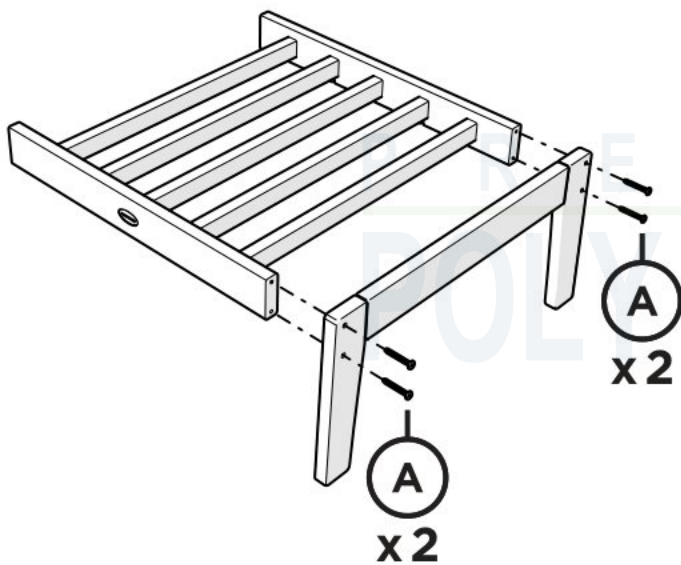

2

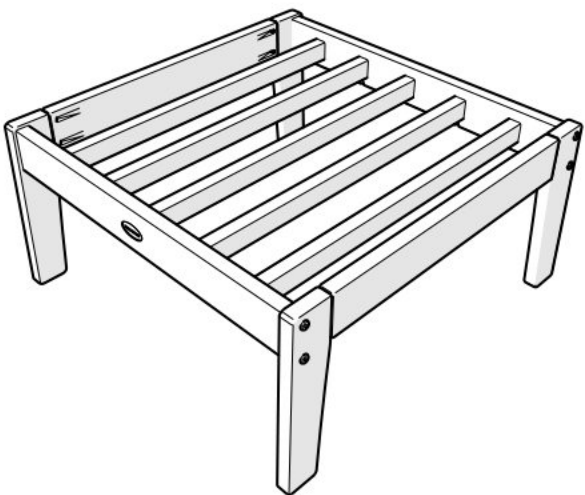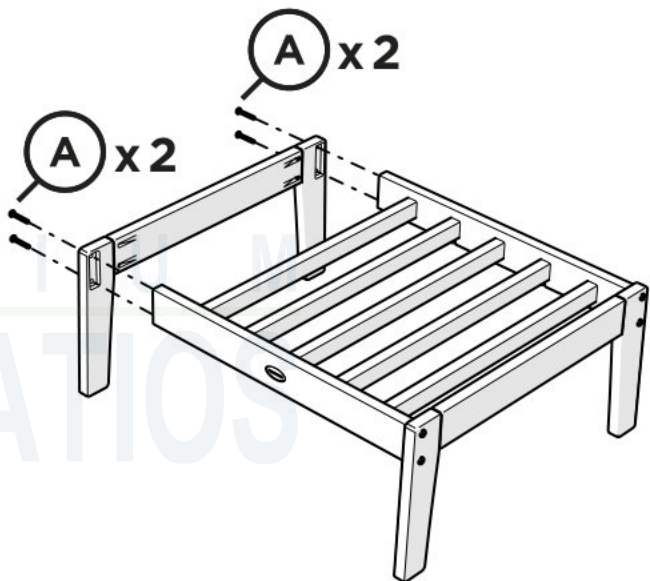

POLYWOOD