


POLYWOOD

Assembly Instructions

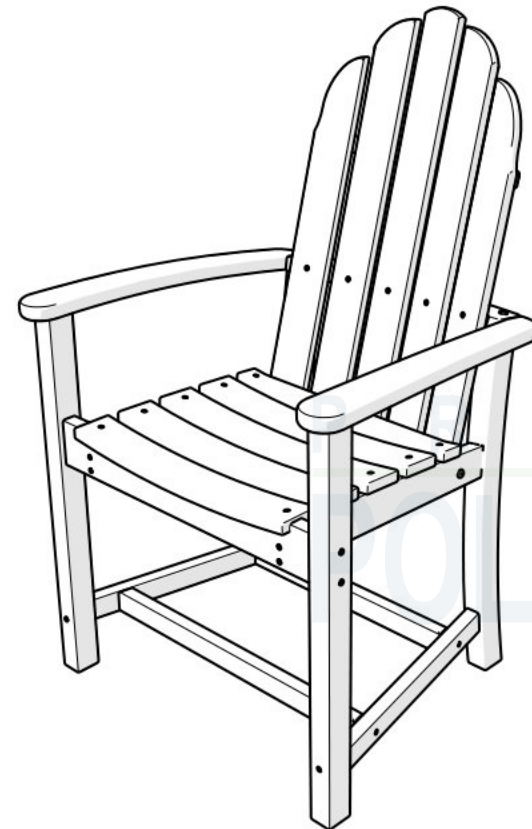

ADD200, 201, 202 Classic Adirondack Chair



20-Year Warranty

To view our full warranty, please visit

Easily register your product using
one of the methods below:

Text POLYWOOD to 71403
Receive a link to register online

— or —

Register on our website

— or —

Send a Picture

Take a photo of the icon below and
text it to 71403 (US only)



Cleaning Tips

Even POLYWOOD gets dirty — here
are some ways to help keep it clean:

For a quick clean:

Simply wipe down with soap and water.


For a deeper clean:

You'll need:

- » 1/3 bleach and 2/3 water solution
- » clean cloth
- » soft bristle brush

Wipe on solution with your cloth
and let it sit on the lumber for a few
minutes (this will not affect the color).
Then, loosen any dirt and debris that
may catch in surface grooves with a
soft bristle brush; hose down to rinse.

TOOLS

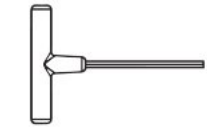


4mm T-handle
hex key (included)




4mm hex key
(included)

PARTS

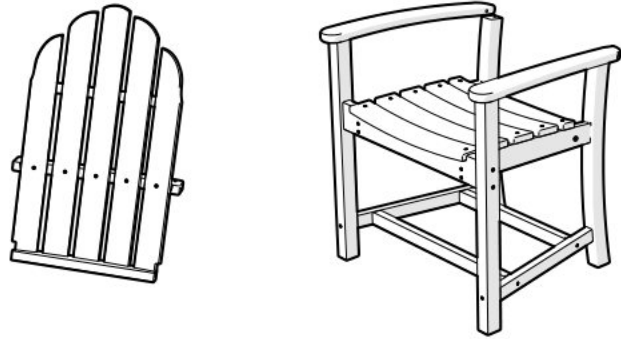


A x 4




2.5" Screw — H.27X2.5

B x 2




3" Screw — H.27X3


1

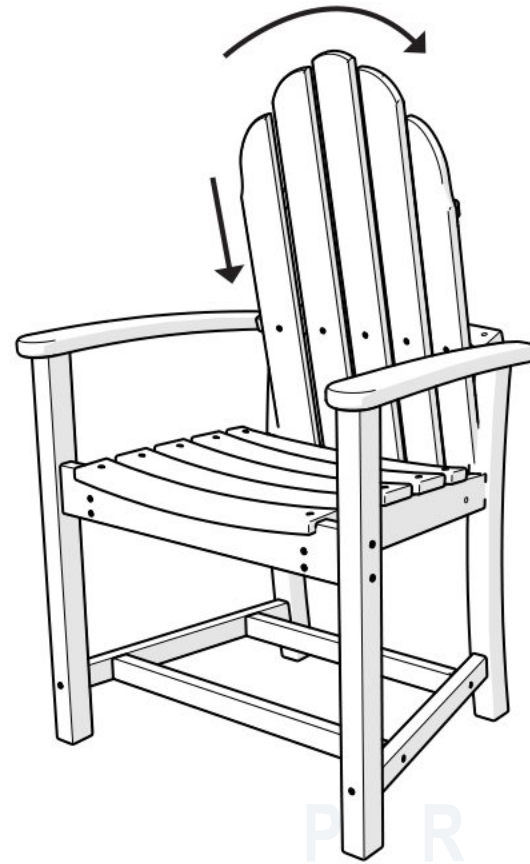



2

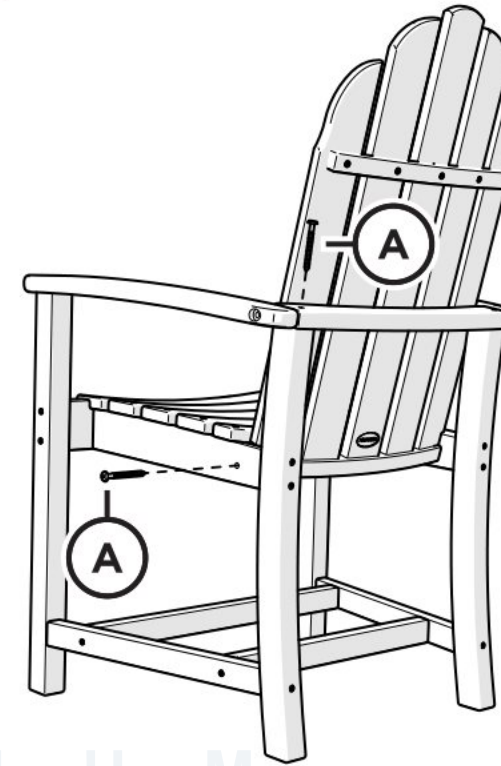


3

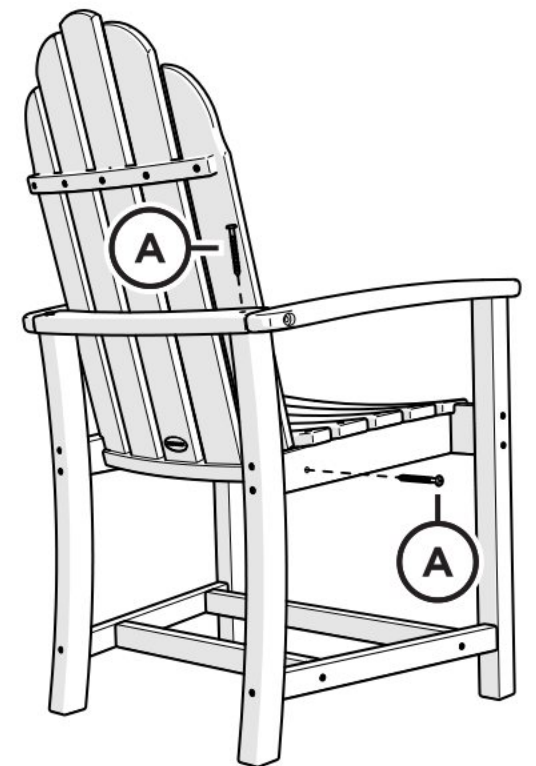


4

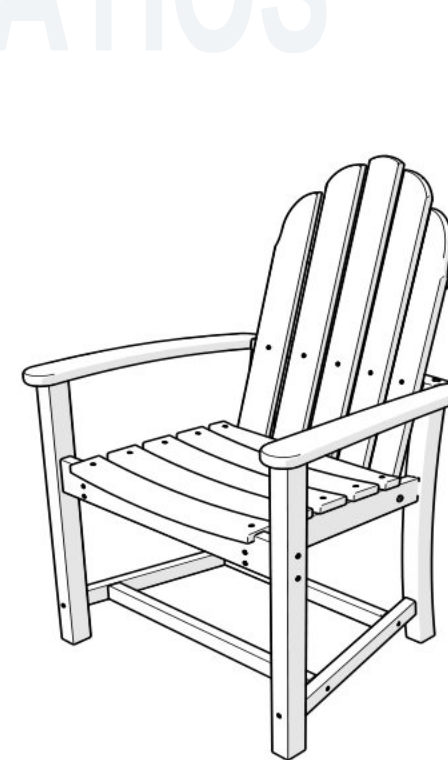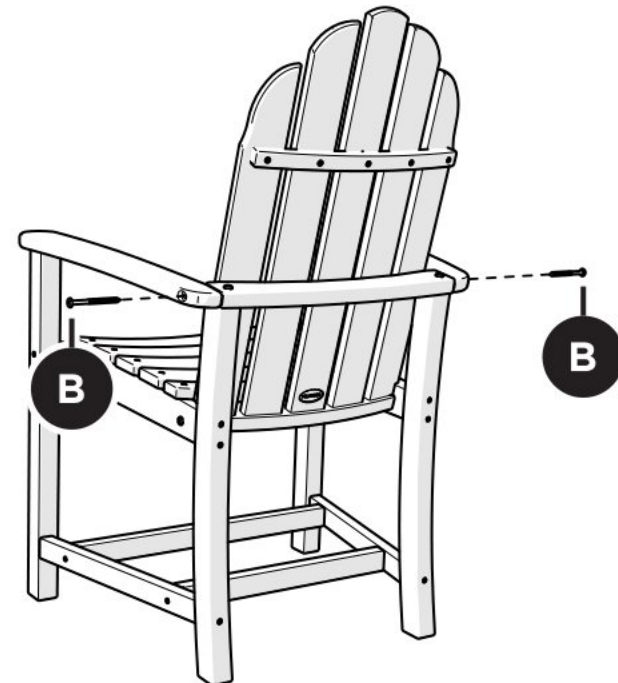

ADD200

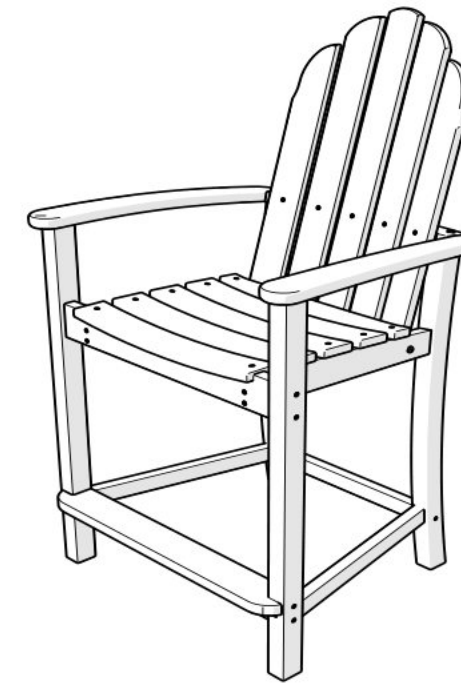

ADD201

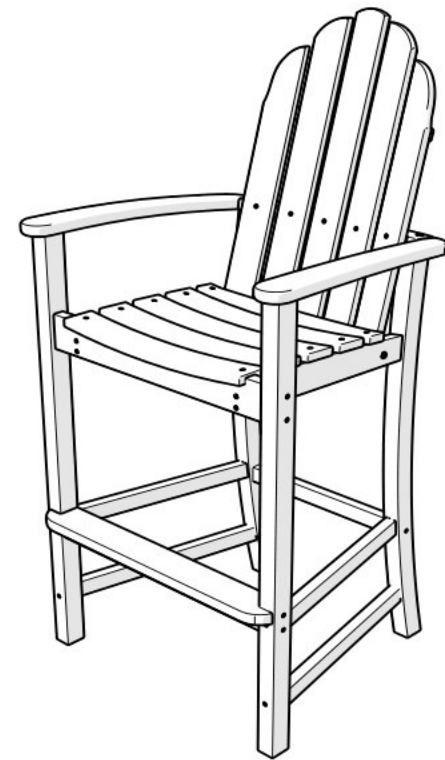

ADD202