



20-year warranty

View our full warranty:



If you have questions or concerns regarding assembly instructions or missing parts, please contact us at



Cleaning tips

For a Quick Clean:

Simply wipe down with soap and water.

For a Deep Clean:


Wipe on $\frac{1}{3}$ bleach and $\frac{2}{3}$ water solution with a clean cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.

For a High-Power Clean:

Use a pressure power washer (not exceeding 1,500 psi) to spray off dirt and debris. Apply a $\frac{1}{3}$ bleach and $\frac{2}{3}$ water solution and scrub with a soft-bristle brush. Hose down to rinse.

POLYWOOD

Assembly Instructions

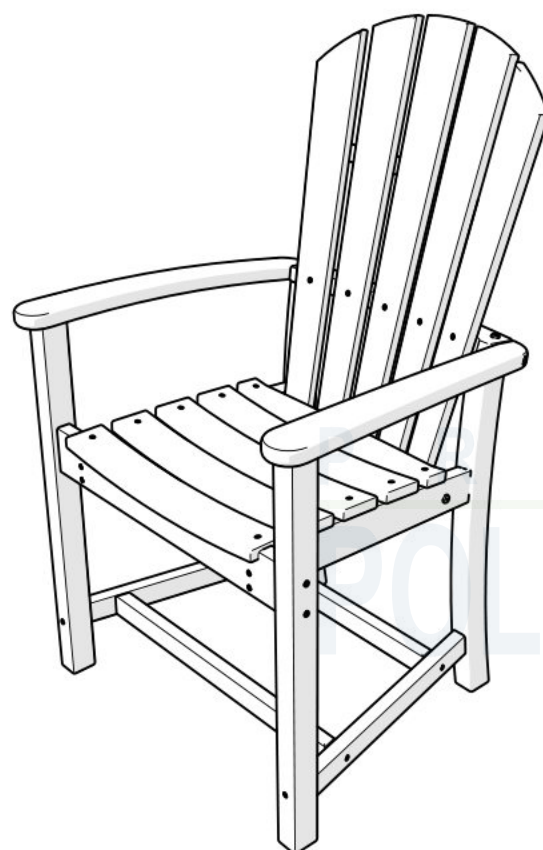


HND200, HND201, HND202 Palm Coast Adirondack Chair


TOOLS




PARTS

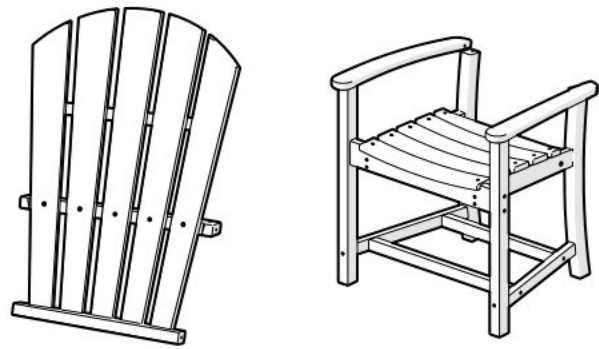


A x4

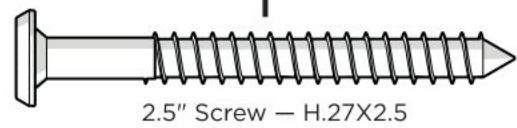


B x2

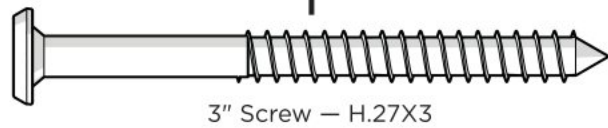


1

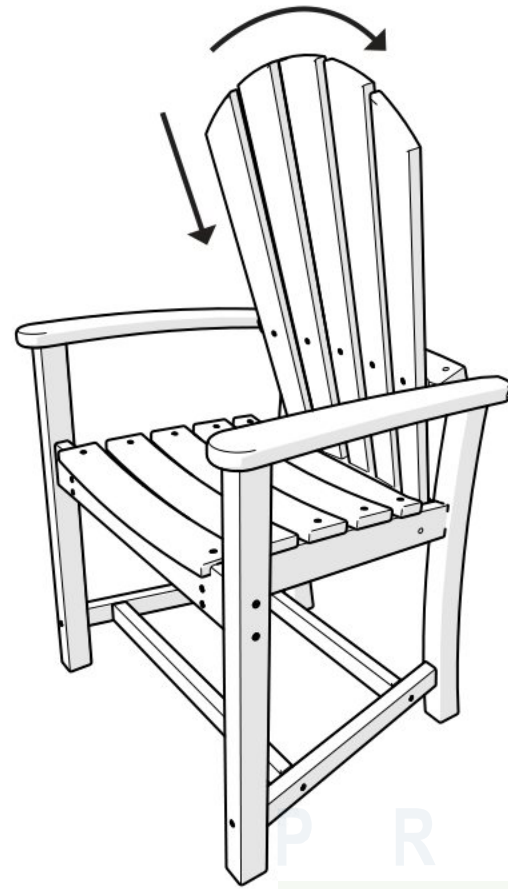



2

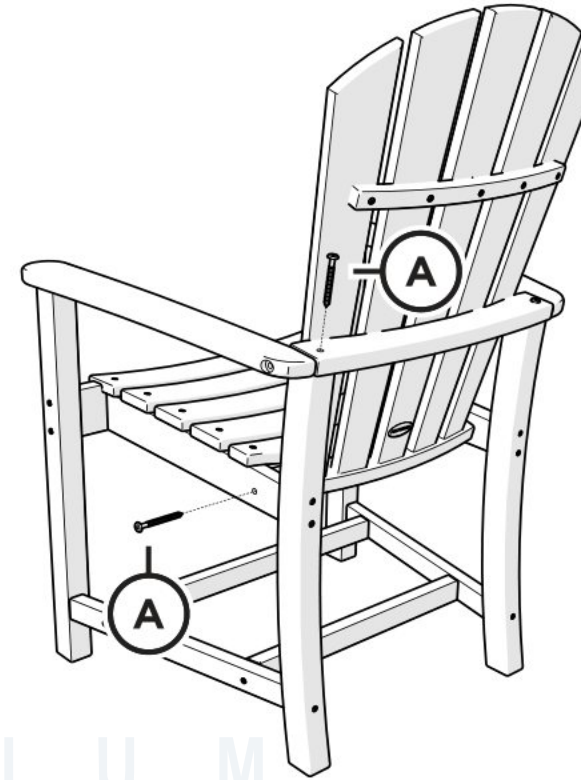


3

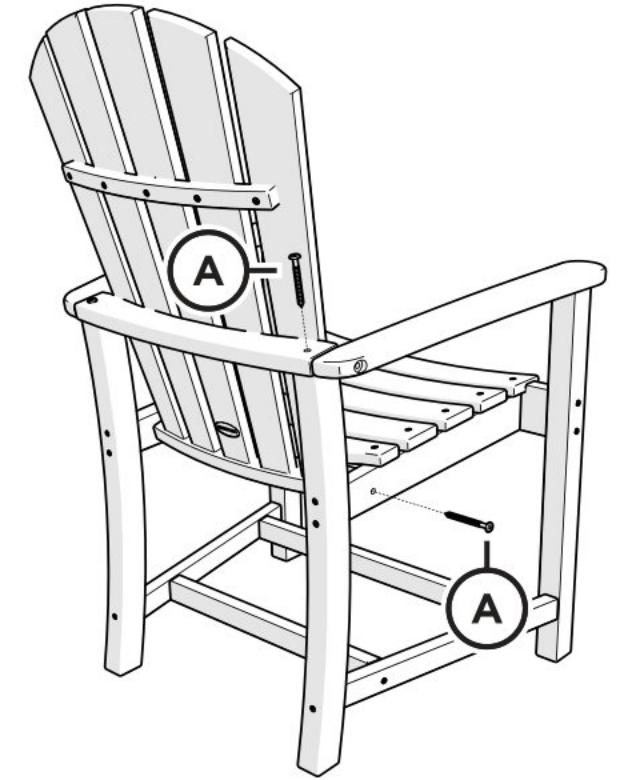


4

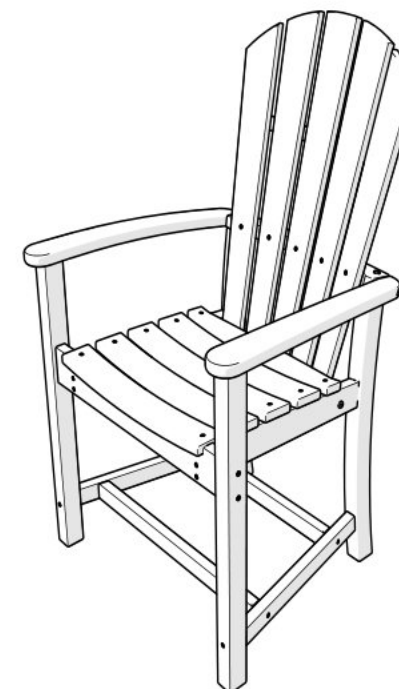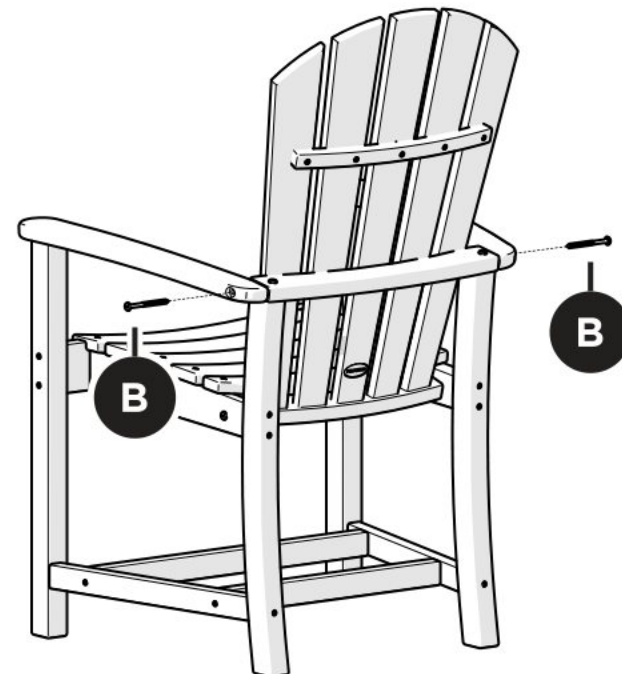

HND200

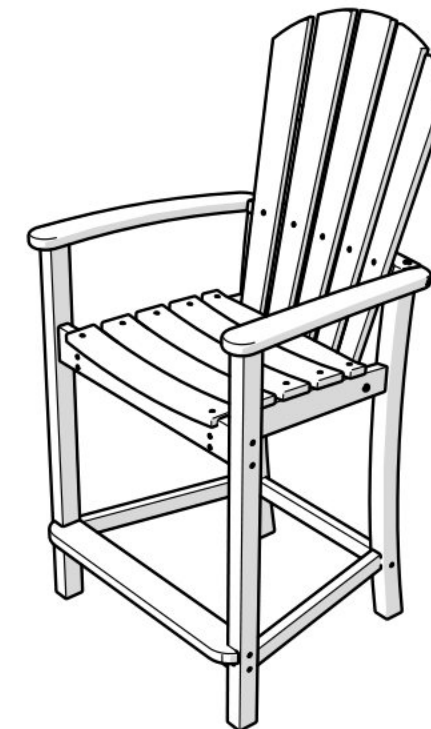

HND201

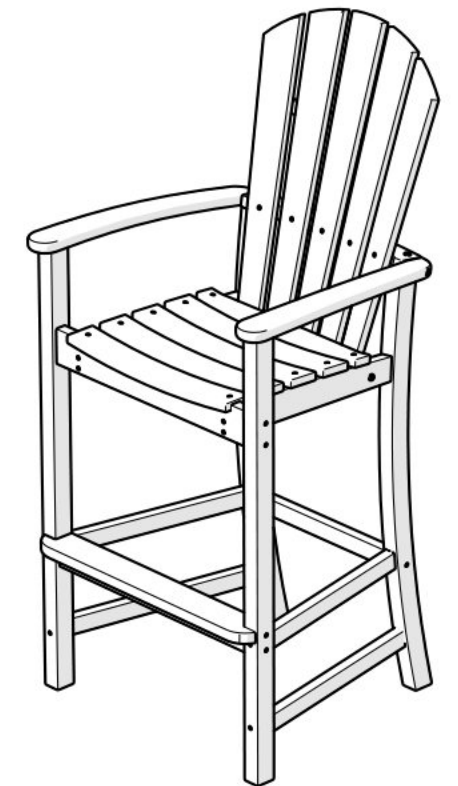

HND202