

POLYWOOD

Assembly Instructions



20-year warranty

View our full warranty:



If you have questions or concerns regarding assembly instructions or missing parts, please contact us at



Cleaning tips

For a Quick Clean:


Simply wipe down with soap and water.

For a Deep Clean:

Wipe on $\frac{1}{3}$ bleach and $\frac{2}{3}$ water solution with a clean cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.

For a High-Power Clean:


Use a pressure power washer (not exceeding 1,500 psi) to spray off dirt and debris. Apply a $\frac{1}{3}$ bleach and $\frac{2}{3}$ water solution and scrub with a soft-bristle brush. Hose down to rinse.

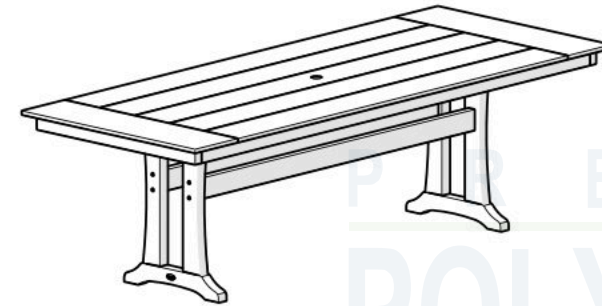


L1D84, L1R84, L1B84

For Use With Rectangle
Plank Tables-PL84

TOOLS




3/8" wrench
(not included)

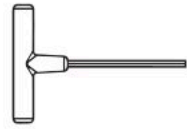


4mm T-handle
hex key (included)


PARTS

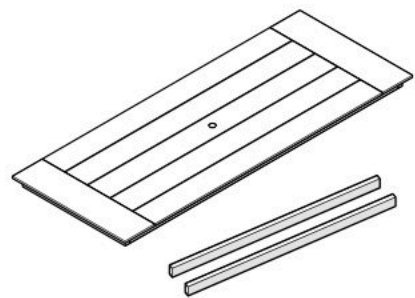

Separate box

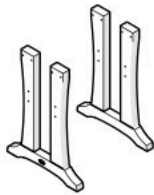


A x 8



3" Screw — HHW14X3


B x 8




3" Screw — H.27X3

1


Align each screw with a
pilot hole and partially
thread by hand before
fully tightening

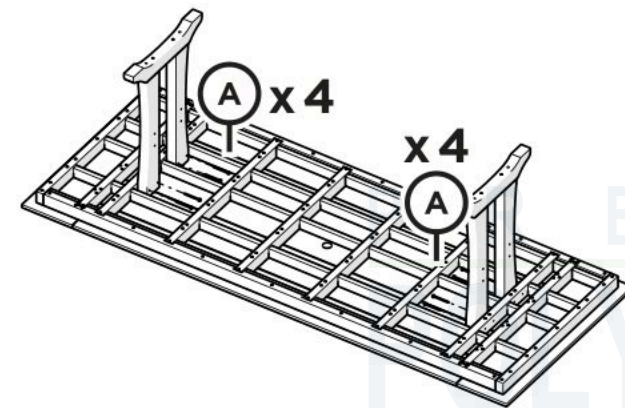


If legs have
relaxed during
transit, they
may be guided
into pilot hole
alignment

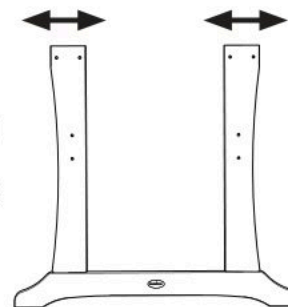

2

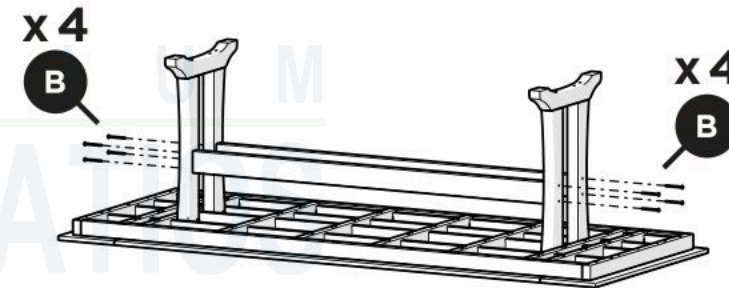

Removable
table plug

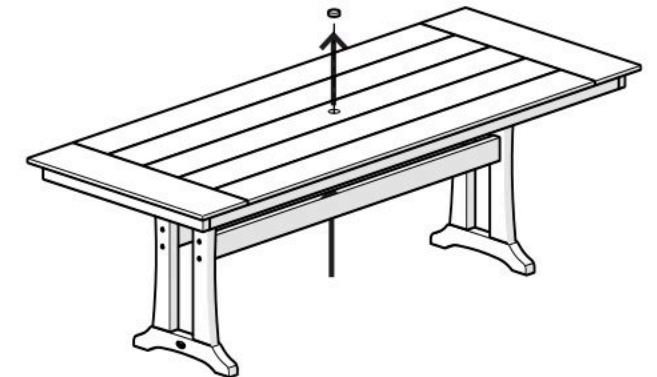



20-year warranty

Great news! Your POLYWOOD warranty is already activated, no need to send anything in. Located on the bottom of each item is a sticker with a serial number. Please keep this number for your records.

View our full warranty:



If you have questions or concerns regarding assembly instructions or missing parts, please contact us at



Cleaning tips

For a Quick Clean:

Simply wipe down with soap and water.

For a Deep Clean:


Wipe on $\frac{1}{3}$ bleach and $\frac{2}{3}$ water solution with a clean cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.

For a High-Power Clean:


Use a pressure power washer (not exceeding 1,500 psi) to spray off dirt and debris. Apply a $\frac{1}{3}$ bleach and $\frac{2}{3}$ water solution and scrub with a soft bristle brush. Hose down to rinse.

POLYWOOD


Assembly Instructions

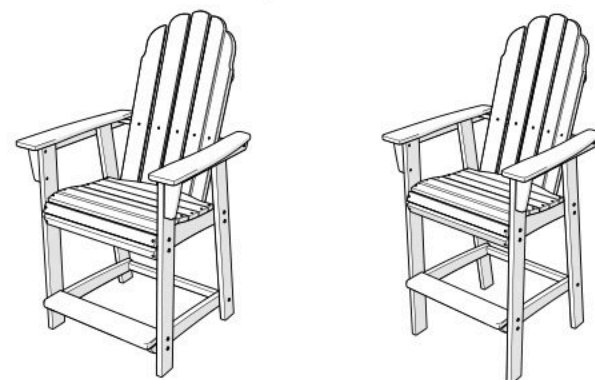

ADD601 / ADD602
Vineyard Curveback Adirondack
Counter / Bar Chair

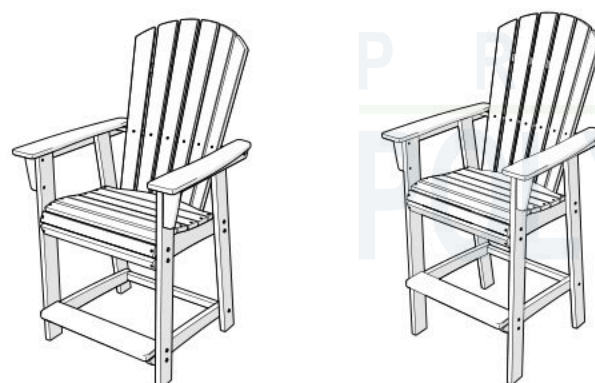


ADD611 / ADD612
Nautical Curveback Adirondack
Counter / Bar Chair

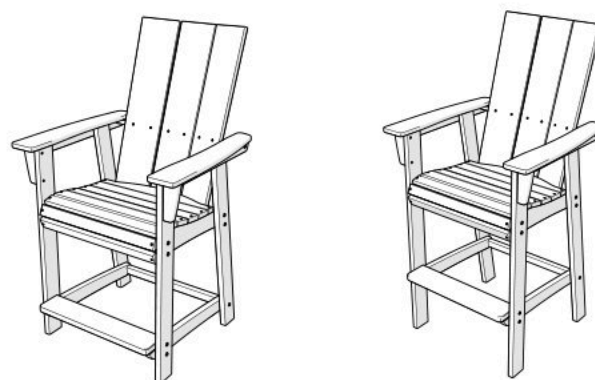

ADD621 / ADD622
Modern Curveback Adirondack
Counter / Bar Chair

TOOLS

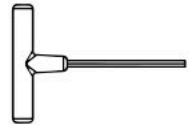


4mm T-handle
hex key (included)

PARTS




A x 12

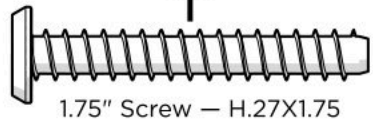


1.75" Screw — H.27X1.75

B x 2




2" Screw — H.27X2

C x 6




3" Screw — H.27X3

1

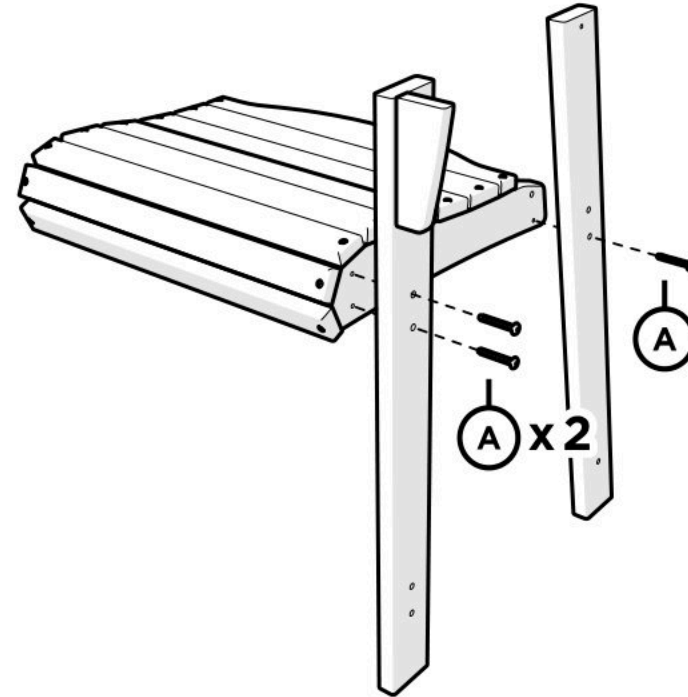


Repeat other side

2

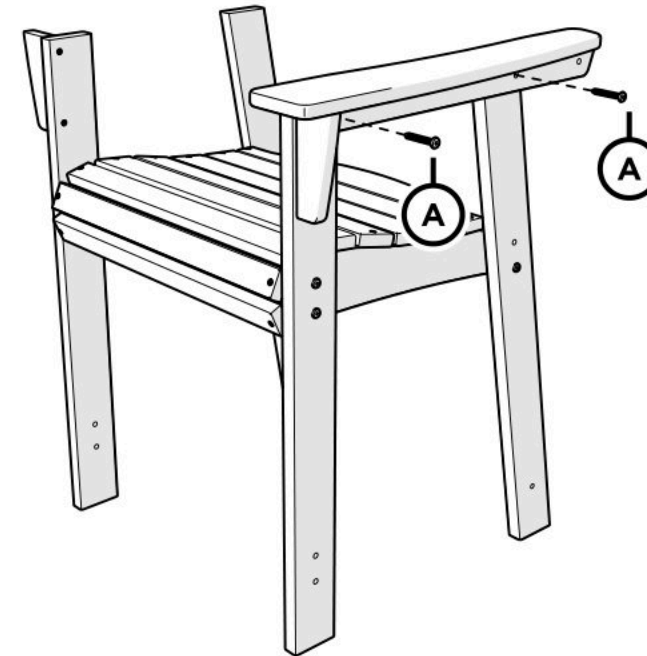


Repeat other side

3

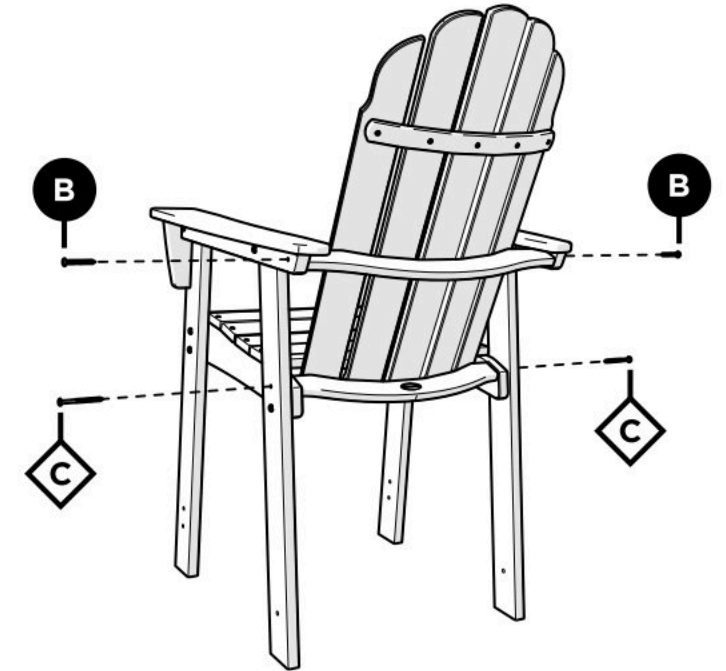

4

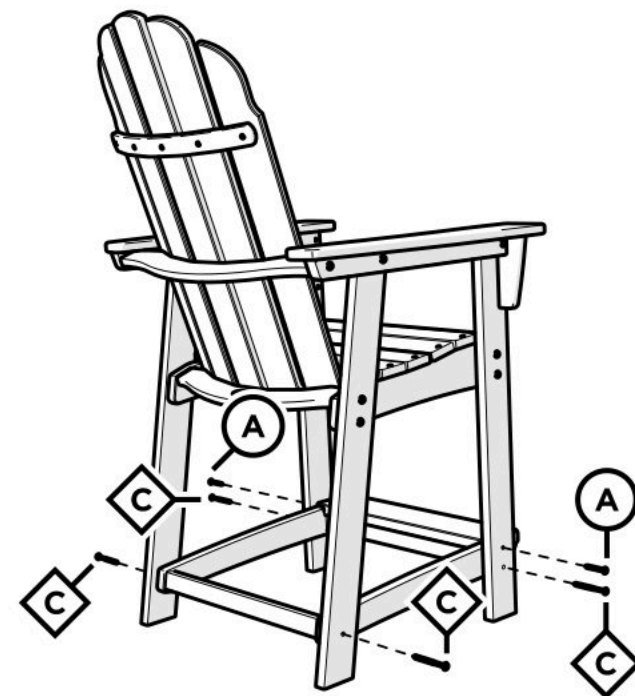

POLYWOOD



20-year warranty

Great news! Your POLYWOOD warranty is already activated, no need to send anything in. Located on the bottom of each item is a sticker with a serial number. Please keep this number for your records.

View our full warranty:



If you have questions or concerns regarding assembly instructions or missing parts, please contact us at



Cleaning tips

For a Quick Clean:

Simply wipe down with soap and water.

For a Deep Clean:


Wipe on $\frac{1}{3}$ bleach and $\frac{2}{3}$ water solution with a clean cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.

For a High-Power Clean:


Use a pressure power washer (not exceeding 1,500 psi) to spray off dirt and debris. Apply a $\frac{1}{3}$ bleach and $\frac{2}{3}$ water solution and scrub with a soft bristle brush. Hose down to rinse.

POLYWOOD


Assembly Instructions

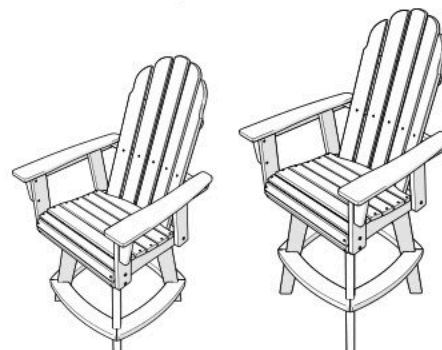

ADDSV601 / ADDSV602
Vineyard Curveback Adirondack Swivel
Counter / Bar Chair

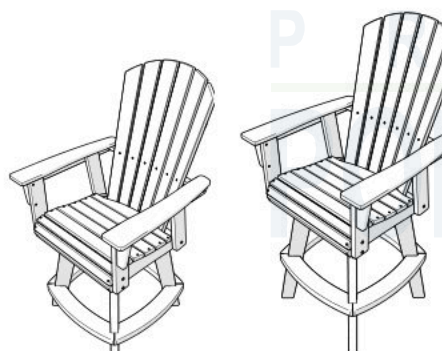


ADDSV611 / ADDSV612
Nautical Curveback Adirondack Swivel
Counter / Bar Chair

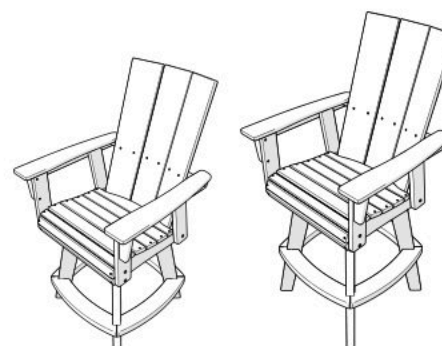


ADDSV621 / ADDSV622
Modern Curveback Adirondack Swivel
Counter / Bar Chair

TOOLS

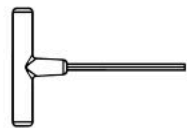


4mm T-handle
hex key (included)

PARTS

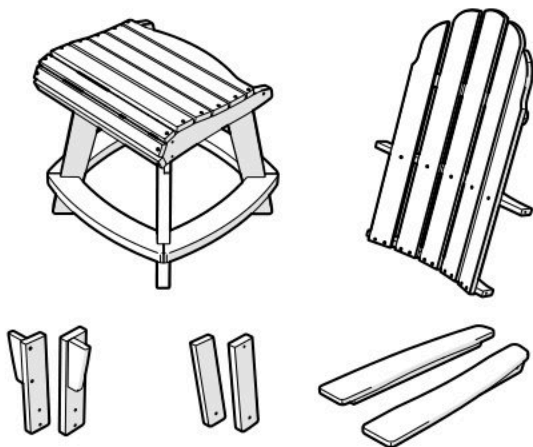


A x 8




1.75" Screw — H.27X1.75

B x 2




2" Screw — H.27X2

C x 2




3" Screw — H.27X3


1

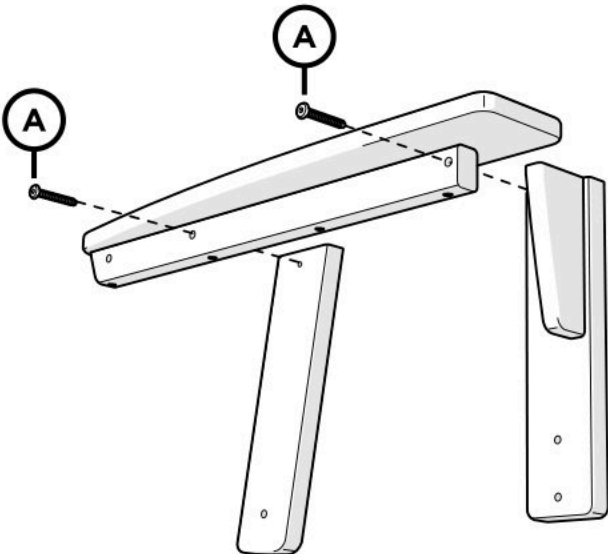

2

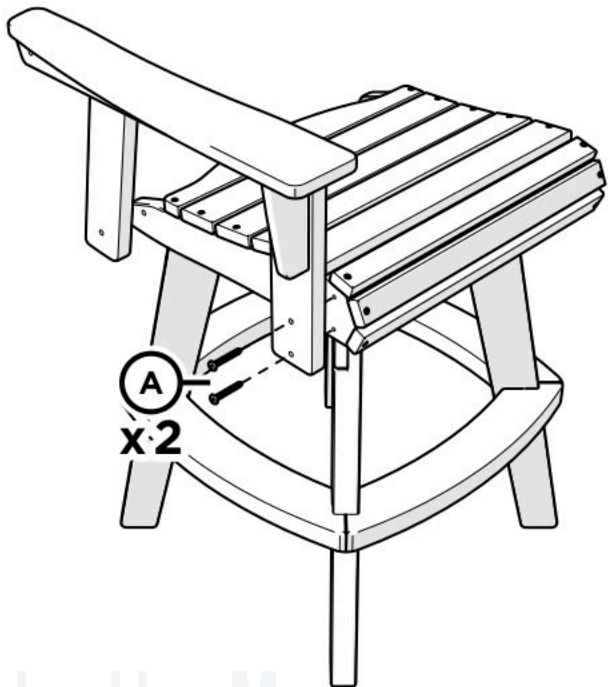


3

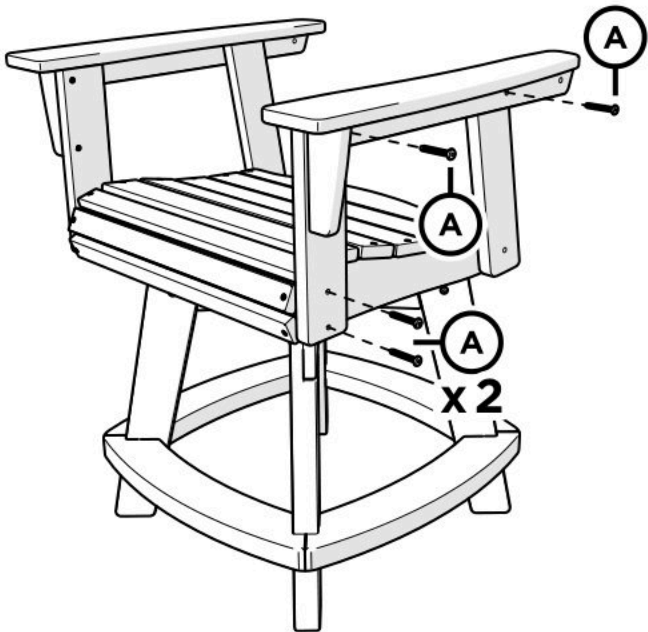

Repeat steps 1 and 2

4

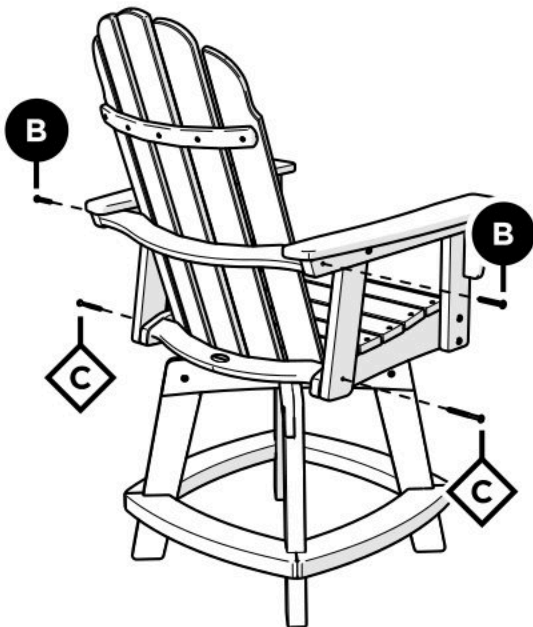

POLYWOOD