



20-year warranty

Great news! Your POLYWOOD warranty is already activated, no need to send anything in. Located on the bottom of each item is a sticker with a serial number. **Please keep this number for your records.**

View our full warranty:



If you have questions or concerns regarding assembly instructions or missing parts, please visit

with our Customer Experience



Cleaning tips

For a Quick Clean:

Simply wipe down with soap and water.

For a Deep Clean:


Wipe on $\frac{1}{3}$ bleach and $\frac{2}{3}$ water solution with a clean cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.

For a High-Power Clean:

Use a pressure power washer (not exceeding 1,500 psi) to spray off dirt and debris. Apply a $\frac{1}{3}$ bleach and $\frac{2}{3}$ water solution and scrub with a soft bristle brush. Hose down to rinse.


POLYWOOD®

Assembly Instructions

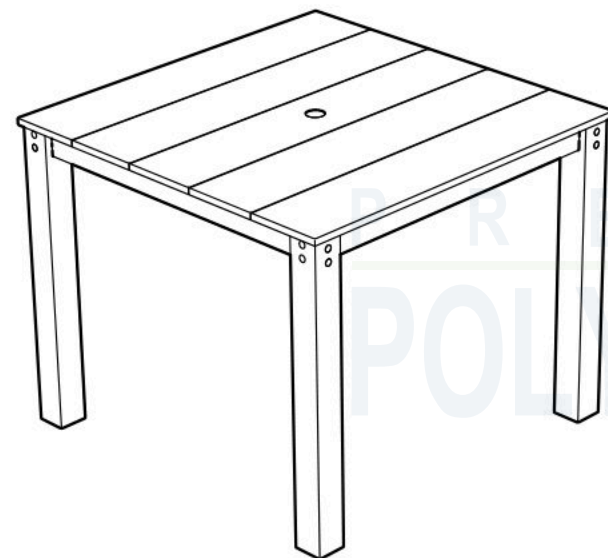


**Parsons 58'' x 58''
Dining Table**


TOOLS

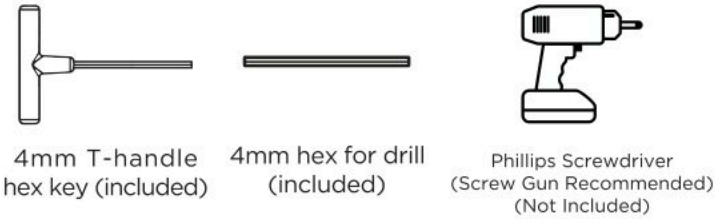

PARTS

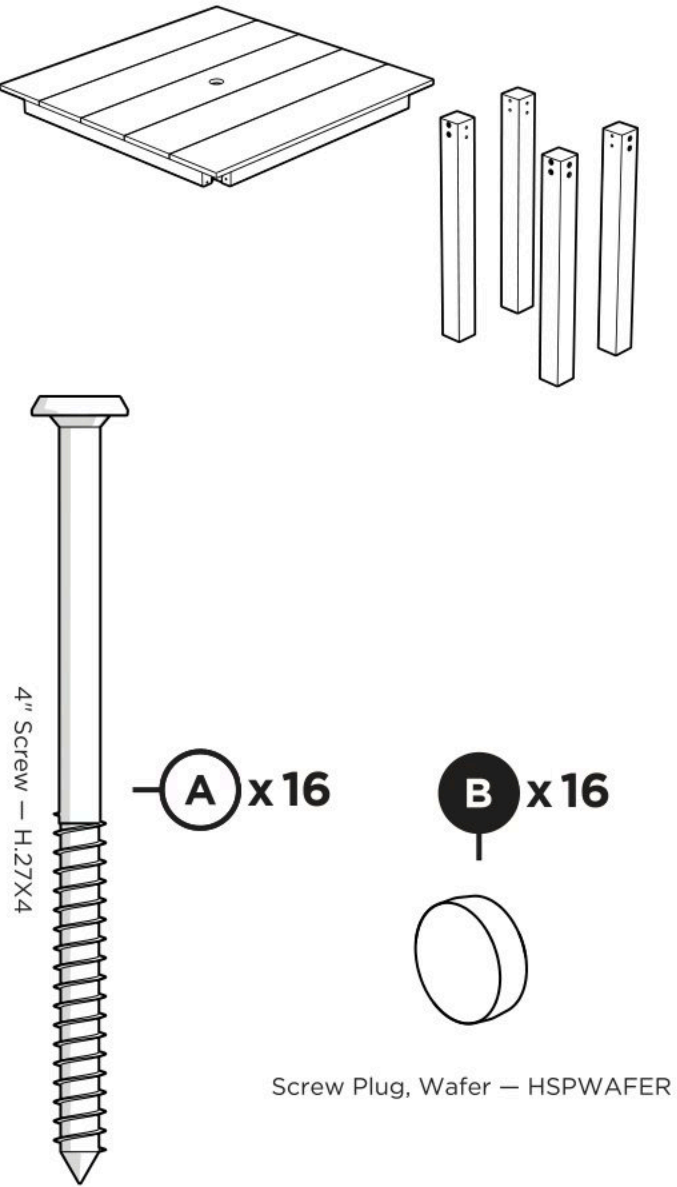


1

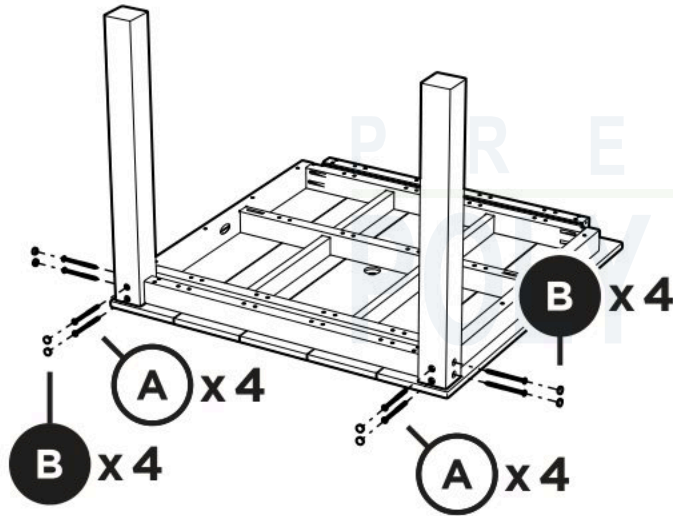


NOTE - Ensure thru holes in legs line up with pilot holes in aprons.

2

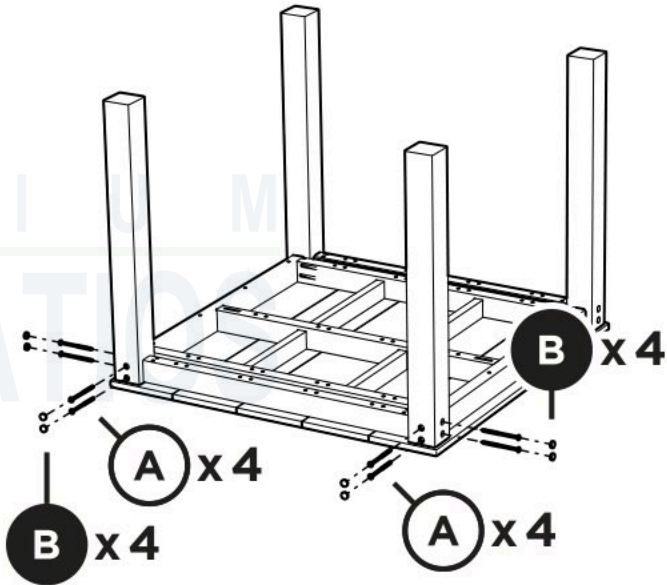

Removeable table plug

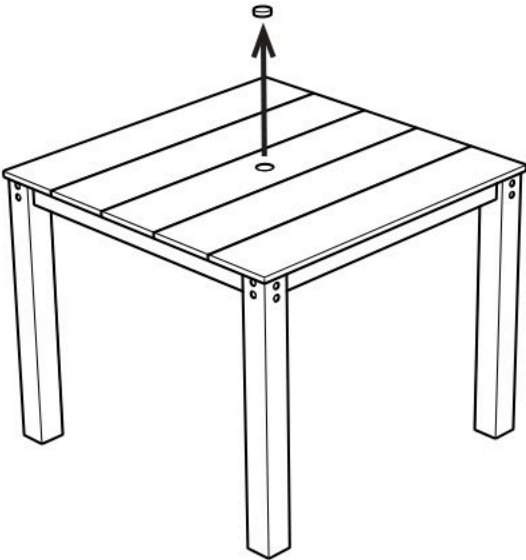



20-year warranty

Great news! Your POLYWOOD warranty is already activated, no need to send anything in. Located on the bottom of each item is a sticker with a serial number. Please keep this number for your records.

View our full warranty:



If you have questions or concerns regarding assembly instructions or missing parts, please contact us at



Cleaning tips

For a Quick Clean:

Simply wipe down with soap and water.

For a Deep Clean:

Wipe on $\frac{1}{3}$ bleach and $\frac{2}{3}$ water solution with a clean cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.

For a High-Power Clean:

Use a pressure power washer (not exceeding 1,500 psi) to spray off dirt and debris. Apply a $\frac{1}{3}$ bleach and $\frac{2}{3}$ water solution and scrub with a soft bristle brush. Hose down to rinse.

POLYWOOD

Assembly Instructions



ADD600/ADU600
Vineyard Curveback
Adirondack Dining/Upright
Chair




ADD610/ADU610
Nautical Curveback
Adirondack Dining/Upright
Chair




ADD620/ADU620
Modern Curveback
Adirondack Dining/Upright
Chair

TOOLS

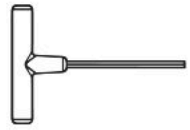


4mm T-handle
hex key (included)

PARTS

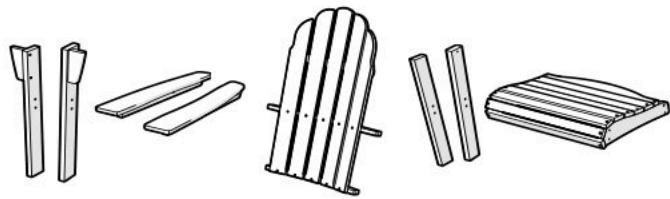


A x 10

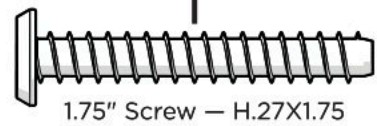


1.75" Screw — H.27X1.75

B x 2




2" Screw — H.27X2

C x 2




3" Screw — H.27X3


1

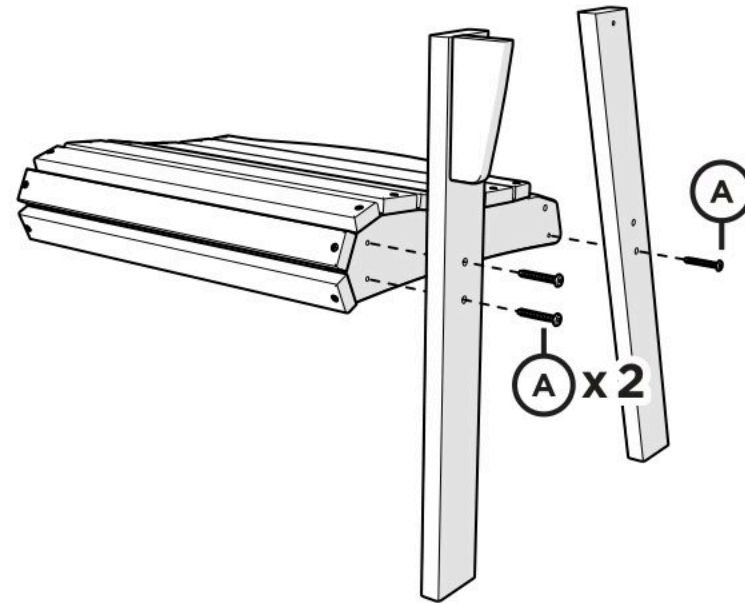


2

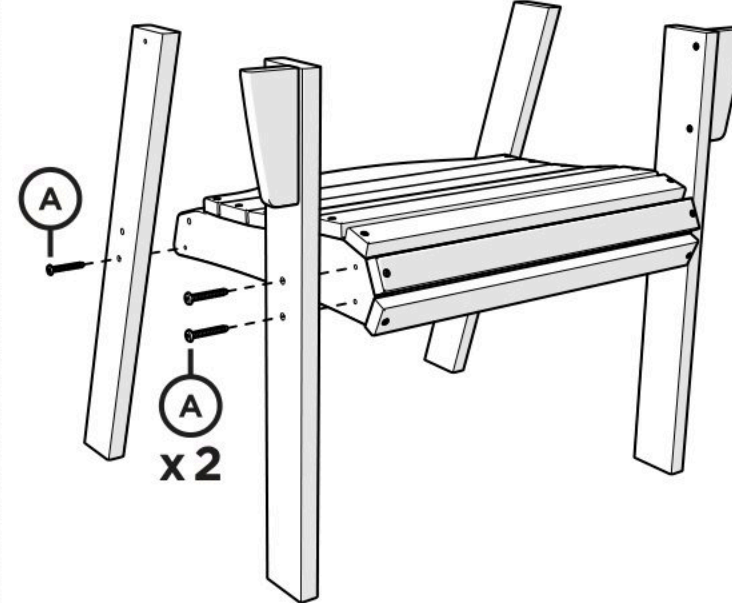



3

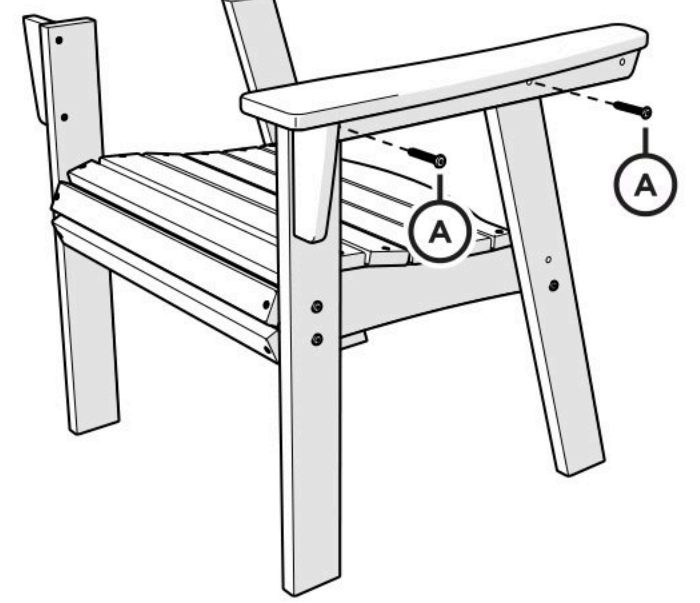

4

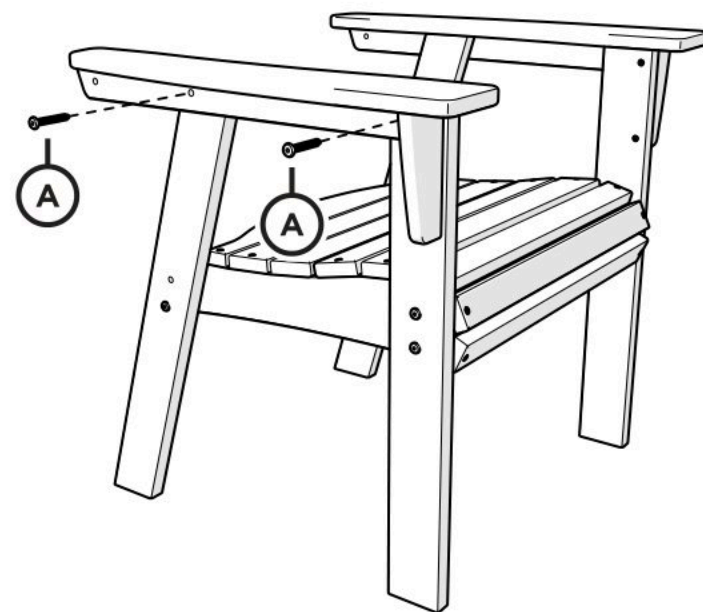

5

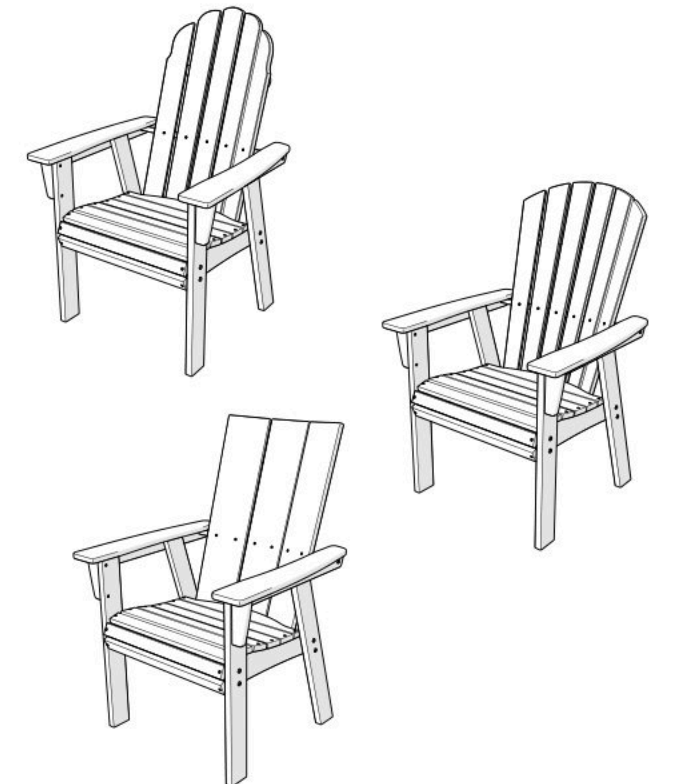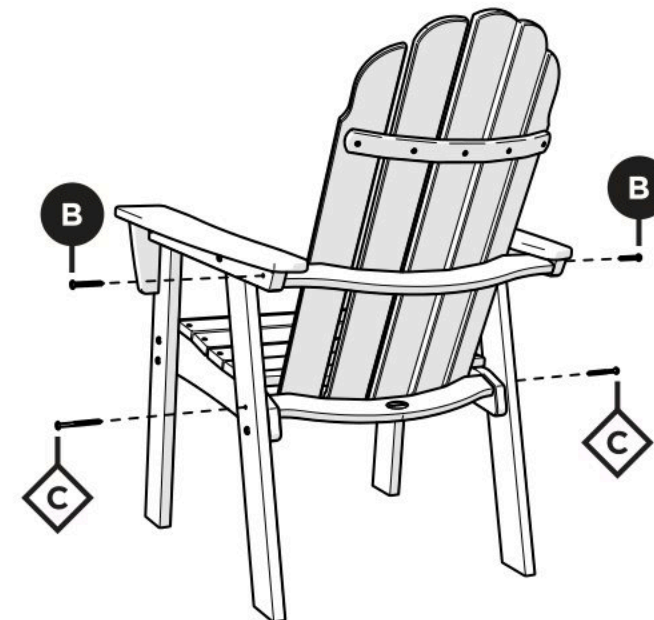

POLYWOOD