


POLYWOOD

Assembly Instructions

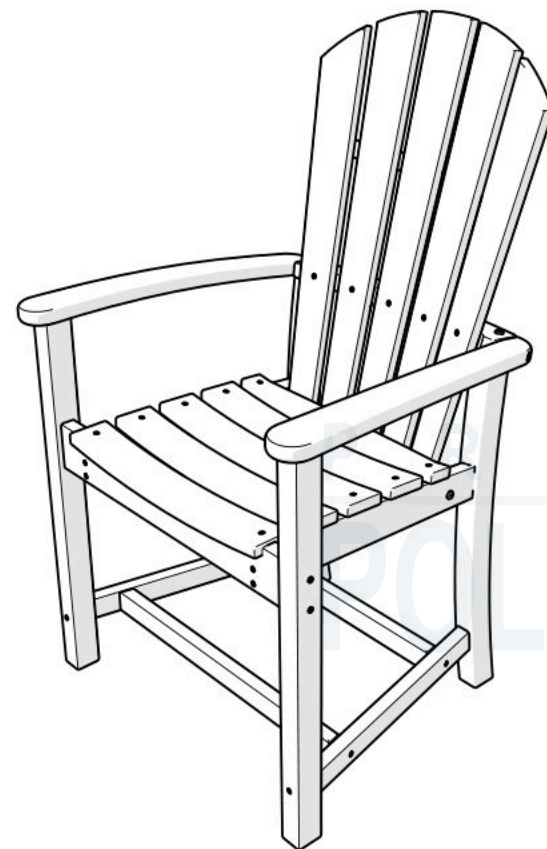

HND200, HND202 Palm Coast Adirondack Chair



20-Year Warranty

To view our full warranty, please visit

Easily register your product using
one of the methods below:

Text POLYWOOD to 71403
Receive a link to register online

— or —

Register on our website

— or —

Send a Picture

Take a photo of the icon below and
text it to 71403 (US only)



Cleaning Tips

Even POLYWOOD gets dirty — here
are some ways to help keep it clean:

For a quick clean:

Simply wipe down with soap and water.


For a deeper clean:

You'll need:

- » 1/3 bleach and 2/3 water solution
- » clean cloth
- » soft bristle brush

Wipe on solution with your cloth
and let it sit on the lumber for a few
minutes (this will not affect the color).
Then, loosen any dirt and debris that
may catch in surface grooves with a
soft bristle brush; hose down to rinse.

TOOLS

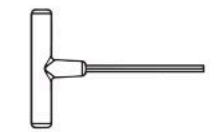


4mm T-handle
hex key (included)




4mm hex key
(included)

PARTS

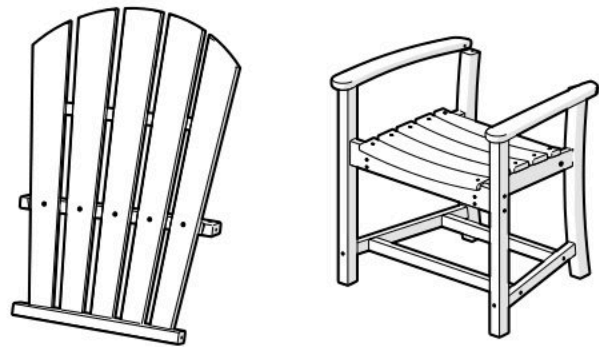


A x4




2.5" Screw — H.27X2.5

B x2




3" Screw — H.27X3


1

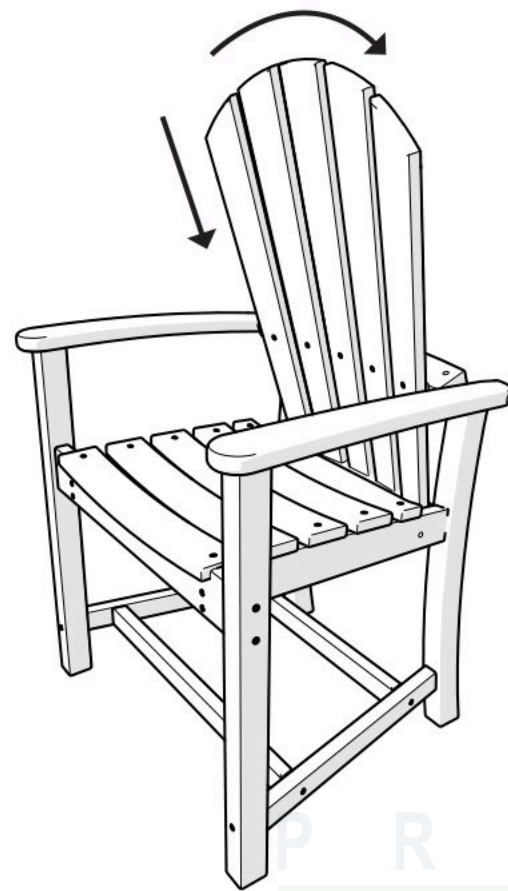



2

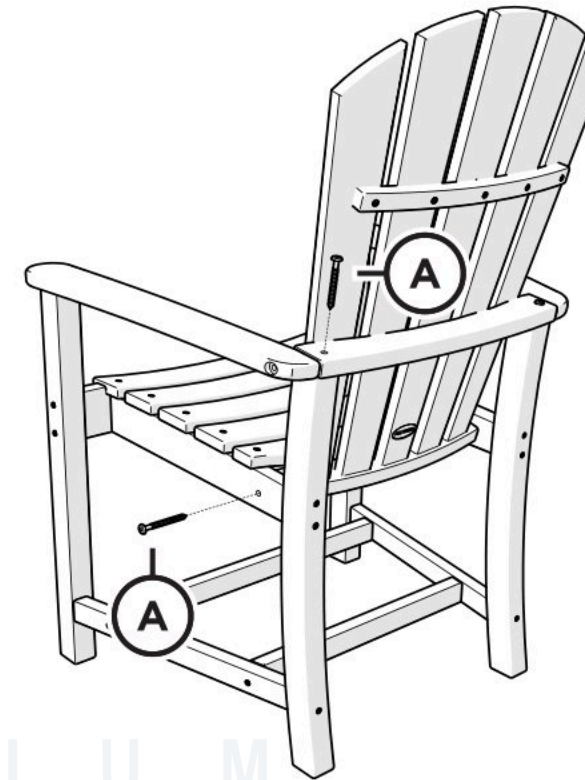


3

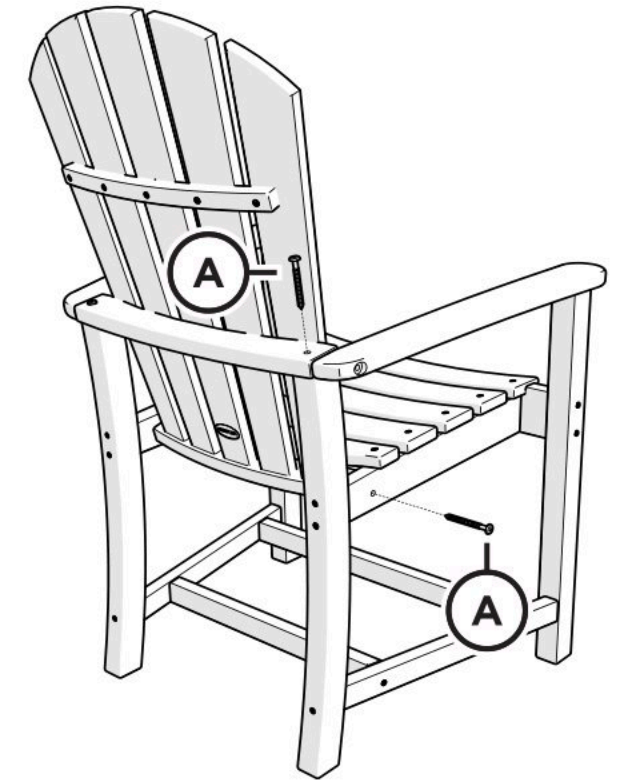

4

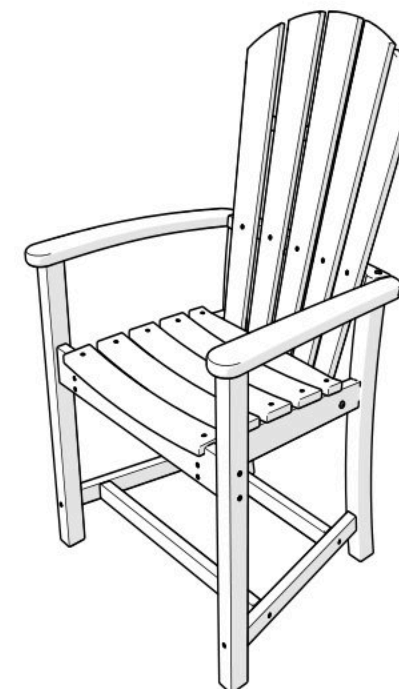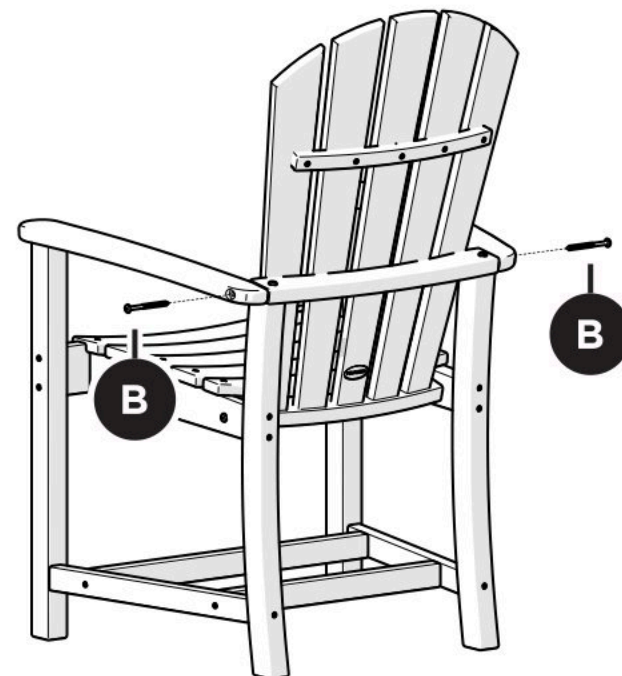

HND200

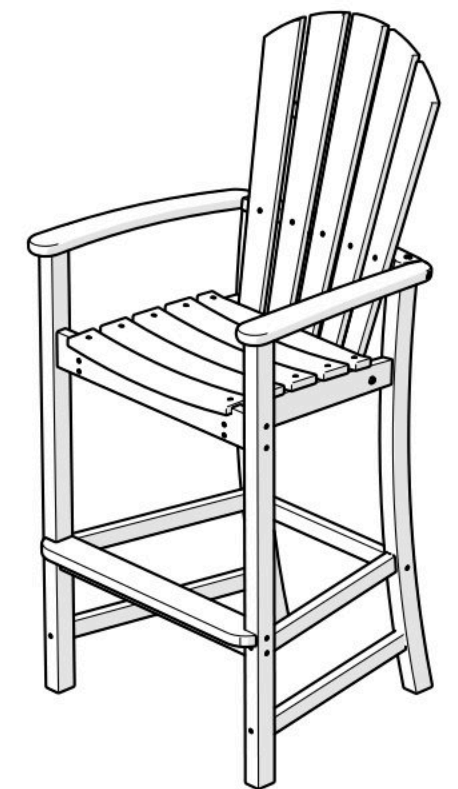

HND202



All Weather Furnishings

Model:
RT448

- (1) Table top
- (2) Leg Assemblies
- (2) Brace
- (1) Hardware pack

TOOLS NEEDED




- 4mm HEX KEY, ALLEN,
T-HANDLE (INCLUDED)

- 3/8" Wrench
(not included)


Step 1

Attach leg assemblies to table top using (8) 2-1/2" chair bolts.

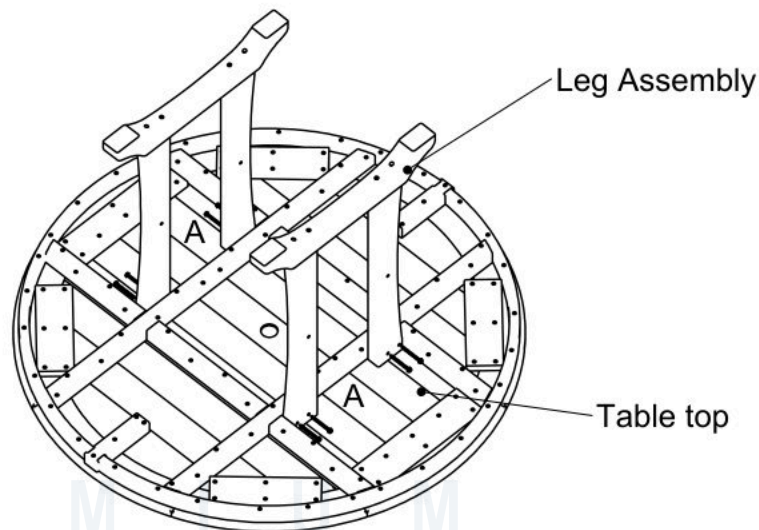

Step 2

Attach braces to leg assemblies using (4) 2-1/2" screws.

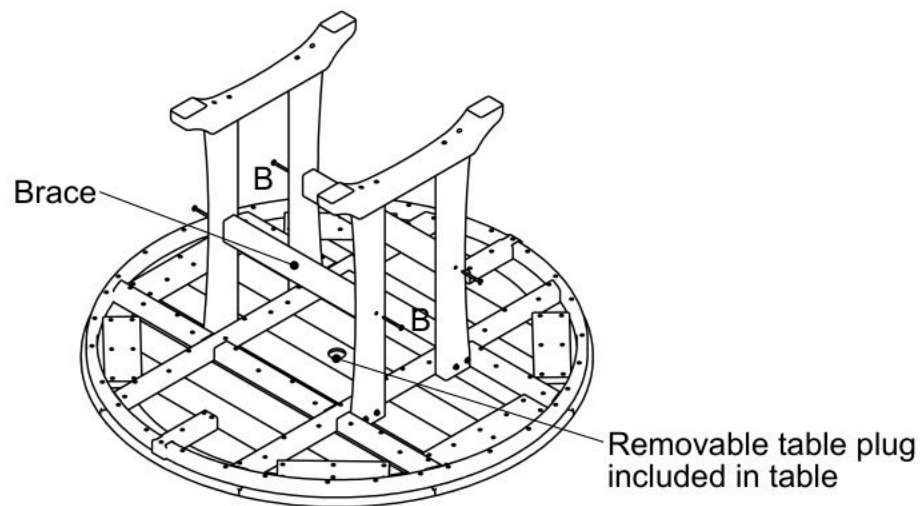

Qty.	Description
8	A - 14 X 2.50 HEX WASHER T-A ALCHM
4	B - .273 X 2.50 SOCKET WAFER A



P R E M I U M

POLY PATIOS

[View this product online at Premium Poly Patios](#)